



IP Office Essential Edition

IP Office Essential Edition - Quick
Version 1400 Series Phone User
Guide

Notices

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer

Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya.

End User agree to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked Web sites referenced within this site or documentation(s) provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product, while under warranty, is available to Avaya customers and other parties through the Avaya Support Web site: <http://www.avaya.com/support>. Please note that if you acquired the product from an authorized Avaya reseller outside of the United States and Canada, the warranty is provided to you by said Avaya reseller and not by Avaya.

Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, [HTTP://SUPPORT.AVAYA.COM/LICENSEINFO/](http://support.avaya.com/licenseinfo/) ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AUTHORIZED AVAYA RESELLER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AUTHORIZED AVAYA RESELLER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA AUTHORIZED RESELLER, AND AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

Avaya grants End User a license within the scope of the license types described below. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the Documentation or other materials available to End User. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users. "Software" means the computer programs in object code, originally licensed by Avaya and ultimately utilized by End User, whether as stand-alone products or pre-installed on Hardware. "Hardware" means the standard hardware originally sold by Avaya and ultimately utilized by End User.

License types

Designated System(s) License (DS). End User may install and use each copy of the Software on only one Designated Processor, unless a different number of Designated Processors is indicated in the Documentation or other materials available to End User. Avaya may require the Designated Processor(s) to be identified by type, serial number, feature key, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation(s) and Product(s) provided by Avaya. All content on this site, the documentation(s) and the product(s) provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil, offense under the applicable law.

Third Party Components

Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information regarding distributed Linux OS source code (for those Products that have distributed the Linux OS source code), and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply to them is available on the Avaya Support Web site: <http://support.avaya.com/Copyright>.

Preventing toll fraud

"Toll fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya fraud intervention

If you suspect that you are being victimized by toll fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support Web site: <http://support.avaya.com>
Suspected security vulnerabilities with Avaya products should be reported to Avaya by sending mail to: securityalerts@avaya.com.

Trademarks

Avaya and Aura are trademarks of Avaya, Inc. The trademarks, logos and service marks ("Marks") displayed in this site, the documentation(s) and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the documentation(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party. Avaya is a registered trademark of Avaya Inc. All non-Avaya trademarks are the property of their respective owners.

Downloading documents

For the most current versions of documentation, see the Avaya Support Web site: <http://www.avaya.com/support>

Contact Avaya Support

Avaya provides a telephone number for you to use to report problems or to ask questions about your product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Web site: <http://www.avaya.com/support>

Contents

1. Introduction

1.1 1403 Telephone.....	8
1.2 1408 Telephone.....	9
1.3 1416 Telephone.....	10
1.4 Dialing Codes.....	11
1.5 Feature Codes.....	12

2. Call Handling

2.1 Making Calls.....	16
2.1.1 Making Internal Calls.....	16
2.1.2 Setting a Callback.....	16
2.1.3 Making External Calls.....	17
2.1.4 Making Page or Direct Calls.....	18
2.1.5 Redial.....	18
2.2 Answering Calls.....	19
2.2.1 Answer a Page Call.....	19
2.2.2 Call Pickup.....	20
2.3 Speed Dialing.....	21
2.3.1 System Speed Dials.....	21
2.3.2 Personal Speed Dials.....	22
2.3.3 Auto Dialing.....	23
2.4 Adjusting the Volume.....	24
2.5 Mute.....	24
2.6 Holding Calls.....	25
2.7 Parking Calls.....	25
2.8 Transferring Calls.....	26
2.8.1 Voice Mailbox Transfer.....	26
2.9 Conferencing Calls.....	27
2.10 Using Handsfree.....	28
2.11 Using a Headset.....	29
2.12 Joining Calls.....	29

3. Other Features

3.1 Absent Text Messages.....	32
3.2 Forwarding Calls.....	33
3.3 Call Coverage.....	34
3.4 Locking Your Extension.....	36
3.5 Account Codes.....	37
3.6 Do Not Disturb.....	38

4. Using Voicemail

4.1 Accessing Your Mailbox.....	41
4.2 Listening to Your Messages.....	42
4.3 Record Your Name.....	43
4.4 Changing Your Access Code.....	44
4.5 Changing Your Greeting.....	45
4.6 Voicemail Coverage On/Off.....	46
4.7 Forwarding a Message.....	47
4.8 Calling a Message Sender.....	47
4.9 Voicemail Email.....	48
4.10 Outcalling.....	49
4.11 Visual Voice.....	50

5. Contacts

5.1 Viewing Contacts Details.....	52
5.2 Make a Call from the Directory.....	53

5.3 Editing a Contact.....	53
5.4 Adding a New Contact.....	54
5.4.1 Add a Contact from the Call Log.....	54
5.5 Deleting a Contact.....	54

6. Call Log

6.1 Using the Call Log.....	56
6.2 Making a Call from the Call Log.....	56
6.3 Viewing Call Details.....	57
6.4 Deleting a Record.....	58
6.5 Deleting All Records.....	58
6.6 Adding a Record to Your Contacts.....	58

7. Button Programming

7.1 Programming a Button.....	60
7.2 Button Functions.....	61

8. Phone Settings

8.1 Naming Your Extension.....	64
8.2 Visual Alerting.....	65
8.3 Audible Alerting.....	65
8.4 Ringer Sound.....	65
8.5 Ringer Volume.....	66
8.6 Display Brightness.....	66
8.7 Display Contrast.....	66
8.8 Display Language.....	66
8.9 Error Tones.....	67
8.10 Button Clicks.....	67
8.11 Default Handsfree Audio Path.....	67
8.12 The Admin Menu.....	68
8.13 The A MENU.....	69
8.14 A-Menu Auto Exit.....	71
Index.....	73

Chapter 1.

Introduction

1. Introduction

This guide covers the basic operation of Avaya 1400 Series phones on a IP Office Essential Edition - Quick Version phone system.

Key System or PBX System

The IP Office Essential Edition - Quick Version system can operate in either of two modes; key mode or PBX mode. Your system administrator will confirm the mode being used by your system. The mode affects the order and role of some of the buttons on your phone.

Programmable Buttons

Each of the phones has a number of programmable buttons. The function of each such button is set either by the telephone system or by your system administrator or can be set by yourself. The role of the first few buttons is determined by whether your system is set to key system or PBX system mode.

Key System Mode

- **Intercom Buttons**

The first two programmable buttons are set as **Intercom** buttons and cannot be changed. These buttons are used to make and receive internal calls.

- **Line Appearance Buttons**

The next buttons are set as line buttons by your system administrator. These buttons are used to make and receive external calls. Your system administrator can adjust the number of line appearance buttons on your phone and which lines they represent.

- **Other Buttons**

Any remaining buttons can be programmed for a range of features. This is done by your system administrator or by yourself through the phone's menus. For more information refer to the IP Office Essential Edition - Quick Version Phone Base Administration manual.

PBX System Mode

- **Call Appearance Buttons**

For a system in PBX system mode, the first three programmable buttons are set call appearance buttons. These buttons are used to make and receive internal and external calls.

- **Line Appearance Buttons**

Your system administrator can assign the next buttons as line appearance buttons if required. This allows you to make and answer calls on a specific line if required. on your phone and which lines they represent.

 
- **Other Buttons**

Any remaining buttons can be programmed for a range of features. This is done by your system administrator or by yourself through the phone's menus. For more information refer to the IP Office Essential Edition - Quick Version Phone Base Administration manual.


1.1 1403 Telephone

The programmable buttons are numbered from 01 to 03 from left to right.


- For systems running in key system mode, the first two programmable buttons, 01 and 02, are fixed as **Intercom 1** and **Intercom 2** buttons.
- For systems running in PBX system mode, the first three buttons, 01 to 03, are fixed as call appearance buttons.

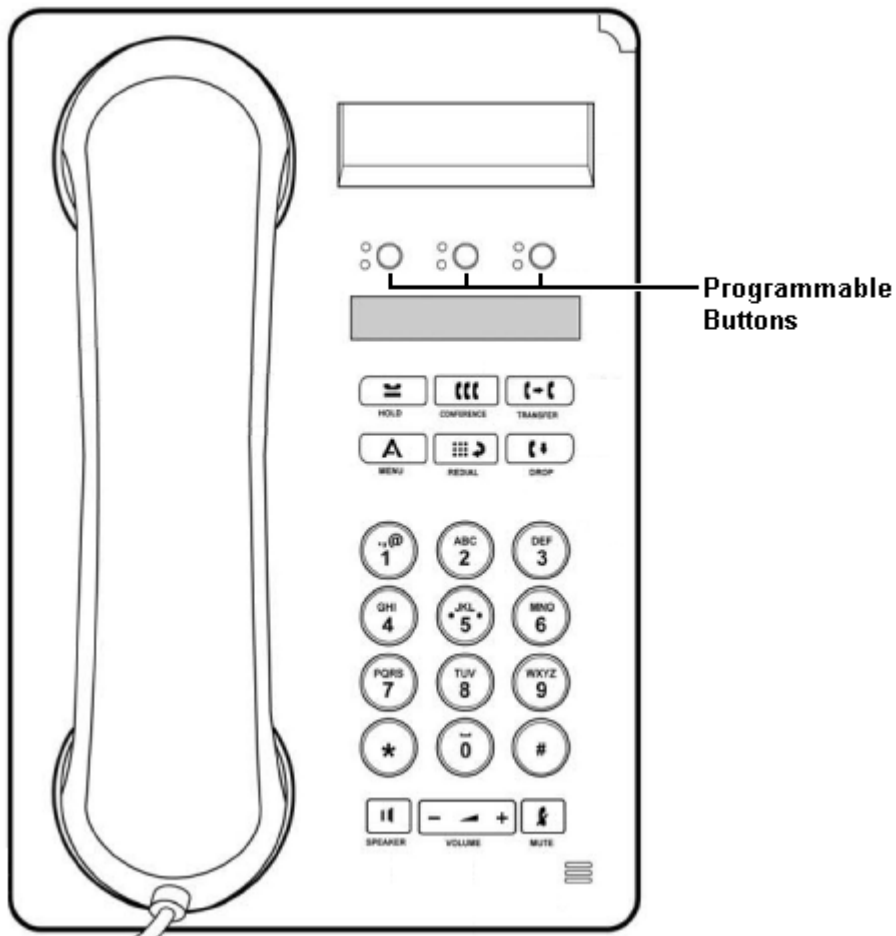

Button Numbering

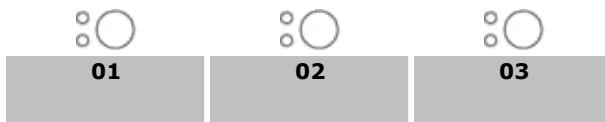 

Key System Mode

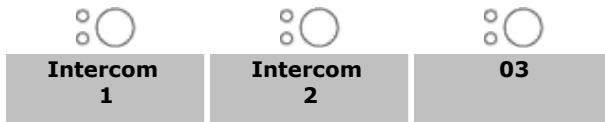 


PBX System Mode



1.2 1408 Telephone

The order of button numbering depends on the mode in which the system is running.

 - For systems running in key system mode, the programmable buttons are numbered from 01 from left to right, bottom to top. The first two buttons are fixed as intercom buttons **Intercom 1** and **Intercom 2**.
- For systems running in PBX system mode, the programmable buttons are numbered from 01 from left to right, top to bottom. The first three buttons are fixed as call appearance buttons.

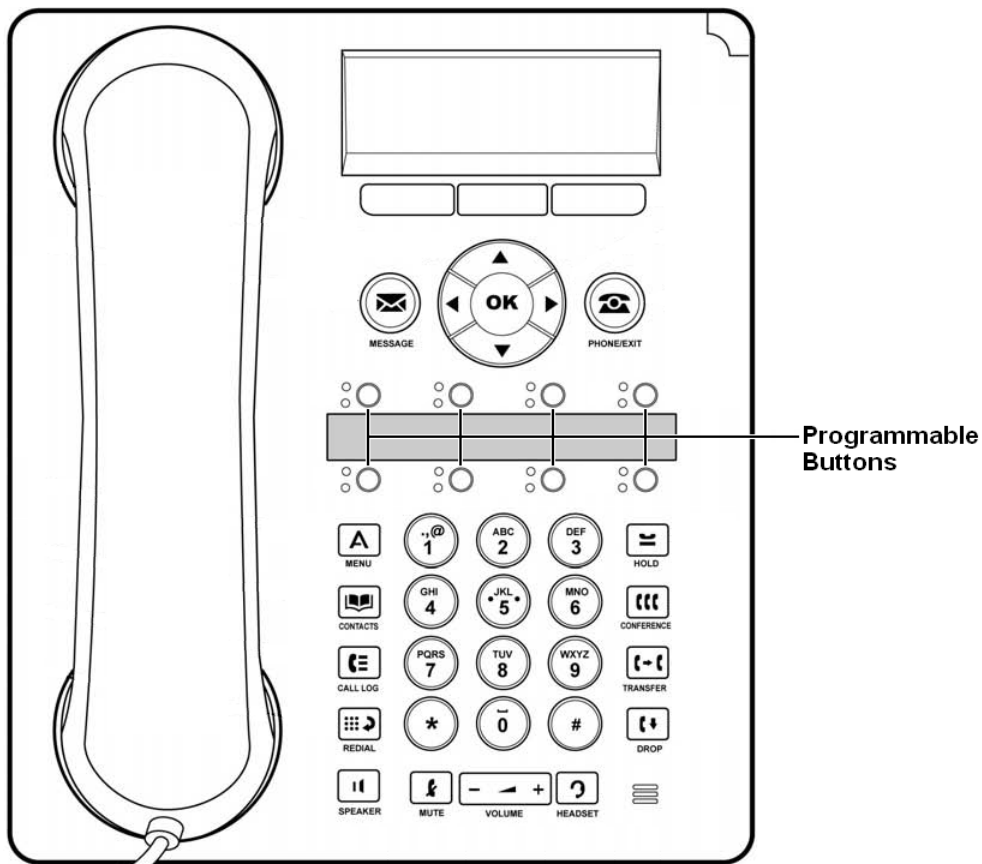

Key System Mode

05	06	07	08
Intercom 1	Intercom 2	03	04


PBX System Mode

Call Appearance	Call Appearance	Call Appearance	04
05	06	07	08

1.3 1416 Telephone

The order of button numbering depends on the mode in which the system is running.

- For systems running in key system mode, the programmable buttons are numbered from 01 from bottom to top. The first two buttons are fixed as intercom buttons **Intercom 1** and **Intercom 2**.
- For systems running in PBX system mode, the programmable buttons are numbered from 01 from top to bottom. The first three buttons are fixed as call appearance buttons.

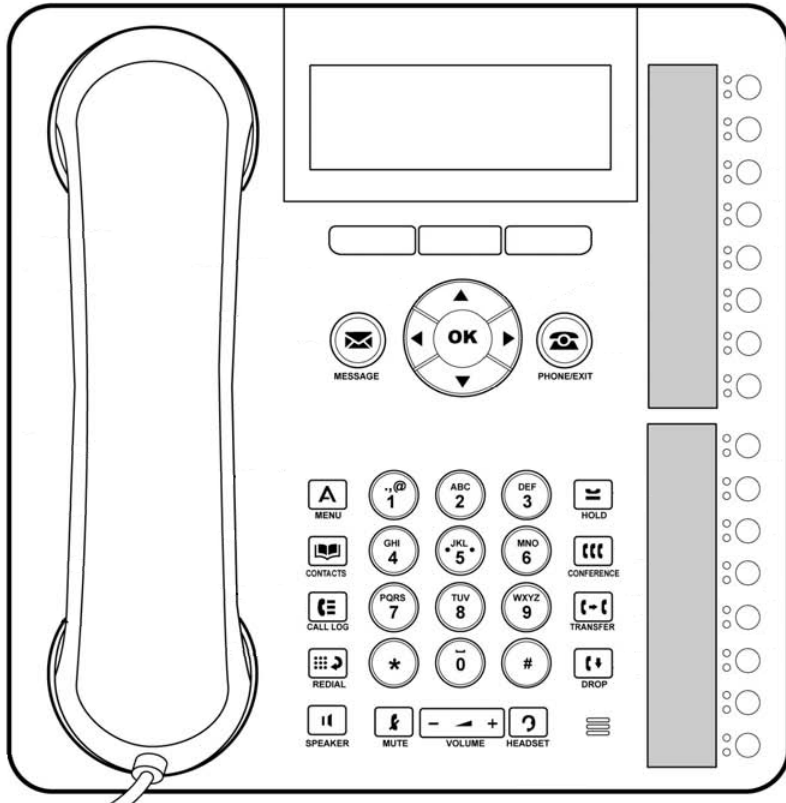

Key System Mode	PBX System Mode
16	Call Appearance
15	Call Appearance
14	Call Appearance
13	04
12	05
11	06
10	07
09	08
08	09
07	10
06	11
05	12
04	13
03	14
Intercom 2	15
Intercom 1	16

Additional buttons can be added by the addition of up to 3 DBM32 button modules, each module providing 32 programmable buttons. On the button modules, buttons are numbered from top down or bottom up depending on the system mode and then left to right.

1.4 Dialing Codes

The following features can be used by dialing the appropriate number.

Feature	Dial	Summary
Call Pickup	6 <Extension Number>	Answer the longest waiting call ringing at an extension.
Group Pickup	66 <Pickup Group>	Answer the longest waiting call ringing any extension that is a member of the pickup group (1 to 4) selected.
Idle Line Pickup	8 <Line Number>	Seize the specified line if it is idle and then make a call using that line.
Active Line Pickup	68 <Line Number>	Answer or seize the call on the specified line.
Loudspeaker Paging	70	Page the loudspeaker device attached to the system.
Simultaneous Paging	*70	Page both the loudspeaker device attached to the system and the extensions in calling group 71.
Group Calling – Ring	7 <Calling Group>	Call the available extensions in one of the calling groups (1 to 4).
Group Calling – Page	*7 <Calling Group>	Page the available extensions in one of the calling groups (1 to 4).
Group Hunting – Ring	77 <Hunt Group>	Call the available extensions in one of the hunt groups (1 to 6).
Group Hunting – Page	*77 <Hunt Group>	Page the first available extension in one of the hunt groups (1 to 6).

1.5 Feature Codes

The following feature codes can be dialed from most phones after pressing **Feature**. Most of these features can also be assigned to programmable buttons.

Feature	Code	Description
Do Not Disturb ³⁸	01	This function allows you to switch do not disturb on or off.
" Cancel ³⁸	01	
Recall	03	This function allows you to send a recall or hook flash signal.
Save Number Redial	04	This function allows you to save the number dialed during a call and to redial that number when idle. This can be used when the number dialed does not answer.
Last Number Redial ¹⁸	05	This function allows you to redial the last external number dialed.
Conference Drop ²⁷	06	This function allows you to select and drop a call from a conference.
Privacy ²⁹	07	This function allows you to turn privacy on or off. When on, other extensions are not able to bridge into your calls.
Call Forward ³³	11	This function allows you to redirect all your calls to another number. If the system administrator has configured your for Remote Call Forwarding, you can forward calls externally by specifying a personal speed dial as the destination.
Call Forward Cancel ³³	11	
Account Code Entry ³⁷	12	This function allows you to enter an account code prior to making a call or during a call.
Voice Mailbox Transfer ²⁶	14	This function allows you to transfer your current call to another extension's mailbox. Your current call is put on hold and you enter the target extension number to indicate the mailbox required.
VMS Cover ⁴⁶	15	This function allows the you to switch use of voicemail coverage for your extension on or off.
Caller ID Name Display	16	This function allows you to swap the display of caller ID name and number information on the phone.
Caller ID Inspect	17	This function allows you to see the caller ID of a call on another line without interrupting the current call to which you are connected.
Call Coverage ³⁴	20	This function allows you to switch call coverage on or off. When on, any calls to you that ring unanswered also start ringing at your call coverage extension.
Station Lock ³⁶	21	This function allows you to lock and unlock your extension from being used to make calls. When selected, you are prompted to enter a four digit code after which the extension is locked. If the extension is already locked, use of this function prompts for reentry of the four digit code to unlock the extension.
Station Unlock ³⁶	22	This function can only be used by the first two extensions in the system. It allows the user to unlock any extension without needing to know the code that was used to lock that extension.
Caller ID Log	23	This function allows you to view the phone system's call log of all caller IDs of calls received by the system. To use this you must be one of the three extensions configured for call ID logging by your system administrator.
Hot Dial	26	This function allows you to dial a stored number without first going off hook or pressing the SPEAKER button.
Absent Message ³²	28	This function allows you to set or clear an absent message for display on you phone. When set, the absent message is also displayed on other extensions when they call the user.
Contact Closure 1	41	This function you to operate the system's contact closure 1 or 2 connection. To use this you must be a member of the system's contact closure group.
Contact Closure 2	42	
System Release	590	Displays the core software level that the system is running.
System IP Address	591	Displays the IP address of the systems LAN port.

Feature	Code	Description
SD Card Serial Number	592	Displays the feature key number of the System SD card. This is the number used for validation of licenses entered into the system configuration.
System Speed Dial ²¹	600 to 699	Dial the selected system speed dial number.
Personal Speed Dial ²²	80 to 99	Dial the selected personal speed dial number.
DND Exception Numbers ³⁸	700 to 719	Set a DND exception number.

Chapter 2.

Call Handling

2. Call Handling

2.1 Making Calls

2.1.1 Making Internal Calls

1. If already on a call, end the call by pressing **Drop** or put it [on hold](#) ^[25] by either pressing **Hold** or pressing the button which the call is on.
2. Press an idle **Intercom** or **Call Appearance** button.
3. Dial the extension number or the code for the feature you wanted to access.

- **To call an extension:**
Dial the extension number. If you put a * in front of the extension number, the system will attempt to make a [direct voice call](#) ^[18].
- **To call a group or attempt a call pickup:**
Dial one of the numbers in the table below. If you put a * in front of the group number, the system will make a [page call](#) ^[18].

Feature	Dial	Summary
Loudspeaker Paging	70	Page the loudspeaker device attached to the system.
Simultaneous Paging	*70	Page both the loudspeaker device attached to the system and the extensions in calling group 71.
Group Calling – Ring	7 <Calling Group>	Call the available extensions in one of the calling groups (1 to 4).
Group Calling – Page	*7 <Calling Group>	Page the available extensions in one of the calling groups (1 to 4).
Group Hunting – Ring	77 <Hunt Group>	Call the available extensions in one of the hunt groups (1 to 6).
Group Hunting – Page	*77 <Hunt Group>	Page the first available extension in one of the hunt groups (1 to 6).

2. You will hear the call progress. You can continue the call handsfree or switch to using the handset or headset (press the **HEADSET** button).
 - If the other extension doesn't answer, press **AutCB** or **Callback** to have the system call you when that extension is next free.

2.1.2 Setting a Callback

If the call is to a user, and they do not answer, you can set a callback. When a callback is set, when the other user next uses their phone or ends their current call, the system will call you and when you answer, automatically makes another call to the user.

To Set a Callback


1. While the call is still ringing or if you hear busy. Press >> and then press **AutCB**.
2. End your call attempt by replacing the handset or pressing **Drop**.

To Clear a Callback

If you have a callback set, you can cancel it using the following process:

1. Press **Feature #2**.

2.1.3 Making External Calls

1. If already on a call, end the call by pressing **Drop** or put it [on hold](#) ^[25] by either pressing **Hold** or pressing the button which the call is on.
2. Press an idle **Line Appearance** or **Call Appearance** button.
3. Dial the telephone number.
 - If using a **Call Appearance** button, some systems may require you to dialing a specific prefix when making external calls. Your system administrator will inform you if a prefix is required.
 - To dial a [personal speed dial](#) ^[22], press **FEATURE** or # and select the speed dial between 80 and 89.
 - To dial a [system speed dial](#) ^[21], press **FEATURE** or # and select a speed dial between 600 to 699.
 - To select a number from the directory press  **CONTACTS**.
4. You will hear the call progress. You can continue the call handsfree or switch to using the handset or headset (press the **HEADSET** button).

2.1.4 Making Page or Direct Calls

You can make calls that are automatically answered if the extension or extensions called support auto answer. There are two methods: page calls and direct voice calls, however the method for making both types of call is much the same.

To Make a Direct Voice Call

For a call to an individual extension, putting * in front of the extension number of the user being called makes the call a direct voice call. If supported by the phone being called, the call is automatically answered after the called users hears 3 beeps.

Unlike a page call, the called user can also speak without having to take any further action if their phone has a handsfree microphone. Otherwise they need to pick up the handset to be heard.

If the user called is already on a call when you attempt a direct voice call to them, your call is turned into a normal waiting call.

1. If already on a call, end the call by pressing **Drop** or put it on hold ^[25] by either pressing **Hold** or pressing the button which the call is on.
2. Dial * and then the extension number of the user.
 - If the user's phone is idle and supports auto answer, you can speak and be heard by them immediately. You can also hear them.
 - If you hear ringing, then either the user called already has another call in progress or has a phone that does not support auto answer.

To Make a Page Call

For a call to a group of extensions, putting a * in front of the extension number of the group being called makes the call a page call. The group type is ignored, instead, all users who are members of the group, have phones that support auto answer and are currently not on another call, hear a single beep and can then hear you. However, you cannot hear the group members.

One of the users being paged can answer the page ^[19] if they want to. That turns the page call into a normal call between just you and the answering user.

2. If already on a call, end the call by pressing **Drop** or put it on hold ^[25] by either pressing **Hold** or pressing the button which the call is on.
2. Dial * and then the extension number of the group.

To Page the Loudspeaker Device

The telephone system can include a connection to a loudspeaker paging device. To page this device make a normal internal call to the extension number 70. If you make an internal call to *70, you will page both the loudspeaker device and the available users in the calling group 71.

2.1.5 Redial

1. Press **Redial**. 1403 phones immediately redial the most recent outgoing call only.
2. The display will show you your outgoing call log.
3. Use the ▲ up and down ▼ arrow keys to scroll through the records.
4. When the name or number required is shown, press **Call**.

2.2 Answering Calls

You can answer telephone calls that are ringing your extension or at another extension. If you regularly pick up calls for a specific extension you can program a [call pickup](#) button for that specified extension.

1. If already on a call, end the call by pressing **Drop** or put it [on hold](#) by either pressing **Hold** or pressing the button which the call is on.
2. While the call is alerting, additional options may be displayed (not 1403). On 1408 and 1416 phones press >> first:
 - **To VM**
This option sends the ringing call to voicemail to leave a message in your mailbox.
 - **Ignore**
This option does not affect the incoming calls but temporarily turns off the ringer.
3. If you pick up the handset or press **SPEAKER** or press **HEADSET**, you are connected to the incoming call.
 - To answer a call alerting on a specific line, press that button.

2.2.1 Answer a Page Call

There are two type of calls which your phone will automatically answer the call so that you automatically hear the caller. This will only happen if your phone is currently idle, ie. not on another call.

Three Beeps

A call connected automatically after [three beeps](#) is a direct voice call to your extension only.

1. The call is connected and answered automatically. You can speak to the caller without taking any further action.

Single Beep

A call connected automatically after [a single beep](#) is a page call a group of which your phone is a member. You can hear the caller but they cannot hear you.

1. You can answer the call, turning it into a normal call between just you and the caller. Press the **Conference** button. You can continue handsfree or pickup the handset. On the 1403 phone, you must pickup the handset.

2.2.2 Call Pickup

If you hear another phone ringing, there are a number of ways that you can answer the call if you know the user, group or line being called.

1. If already on a call, end the call by pressing **Drop** or put it [on hold](#) ^[25] by either pressing **Hold** or pressing the button which the call is on.
2. Press an idle **Intercom** or **Call Appearance** button.
 - **To pickup a call ringing at a particular extension:**
Dial **6** followed by the extension number at which the call is ringing or parked.
 - **To pickup the longest waiting call in a pickup group:**
Dial **66** followed by the pickup group number (1 to 4).
 - **To pickup the call ringing on a particular line:**
Dial **68** followed by the two digit line number.
3. You can continue the call handsfree or switch to using the handset or headset (press the **HEADSET** button).

To Create a Call Pickup Button (Not 1403)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.
3. Press the programmable button you want to change. Alternatively:
 - Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
 - At the **Button:** prompt press the button to edit or enter from the button number.
4. The current setting of that button is displayed.
5. Press **Program** and either press **Intercom 1** or use the ▲ up or down ▼ arrow buttons to scroll the display to **Call Pickup** and press **Select**.
6. At the **Endpoint:** prompt enter **6** followed by the target extension.
7. The current setting of the button will now be **Call Pickup** followed by the target extension number.
 - Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

To Use a Call Pickup Button


 

1. Press the **Call Pickup** programmed button for the specified extension number. You are connected to the call that was ringing the specified extension.

2.3 Speed Dialing

 
There are a number of ways that you can dial a stored number.

2.3.1 System Speed Dials

The system administrator can program up to 100 frequently used number as system speed dial numbers 600 to 699. Any user in the system can use a system speed dial by pressing **FEATURE** and dialing the three digit code of the system speed dial required.

- Except in special cases which the system administrator can configure, system speed dials do not override any dialing restrictions that apply to an extension.
- Phone users (except 1403) can also view and use system speed dials through the phone's  [CONTACTS](#)  menu.
- The first two extensions on the system can also edit the system speed dials through the  **CONTACTS** menu.


To Use a System Speed Dial

1. If already on a call, end the call by pressing **Drop** or put it [on hold](#)  by either pressing **Hold** or pressing the button which the call is on.
2. Press **FEATURE** or # and dial the three digit system speed dial code between 600 and 699.
3. The stored number is dialed.

 
2.3.2 Personal Speed Dials

You can create up to 20 personal speed dial codes, 80 to 99, to store frequently dialed numbers. The numbers can be quickly dialed by pressing **FEATURE** and the two-digit code for that personal speed dial.





The personal speed dial numbers programmed for a particular extension can only be used at that extension.

- If the system is connected to a PBX or Centrex system and a dial-out code (usually 9) is needed to place calls outside the PBX or Centrex system, include the dial-out code in Speed Dial numbers that must dial out of the PBX or Centrex system.
- Personal speed dials do not override any dialing restrictions that apply to an extension.
- Phone users (except 1403) can view, use and edit their personal speed dials through the phone's  [CONTACTS](#) menu.

To Use a Personal Speed Dial

1. If already on a call, end the call by pressing **Drop** or put it [on hold](#)  by either pressing **Hold** or pressing the button which the call is on.
2. Press **FEATURE** or # and dial the two digit personal speed dial code between 80 and 99.
3. The stored number is dialed.

To Edit Your Personal Speed Dials (Not 1403)

1. At the extension, press **Admin**.
2. Use the  up or down  arrow buttons to scroll the display to **Telephone Programming**. When displayed, press **Select**.
3. Use the  up or down  arrow buttons to scroll the display to **Personal Speed Dial**. When displayed, press **Select**.
4. At the **Code:** prompt enter between 80 and 99 to select the speed dial entry that you want to edit.
5. The current setting of the speed dial entry is displayed.
6. To enter a number press **Enter**, dial the number and press **Enter**. To remove the number press **Clear**.
 - The number can be up to 28 characters in length.
 - If your system uses an external dialing prefix, remember to include the prefix.
 - The following keys can be used to enter special dialing commands.

Function	Press to insert	Character	Description
Pause	HOLD	P	Inserts a 1.5 second pause.
Transfer	SPEAKER	R	Send a hook-switch flash signal.
Stop	CONFERENCE	S	Stop dialing.

- Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

2.3.3 Auto Dialing

An auto dialing button is used to store a frequently used or important number. Whenever the number needs to be dialed, pressing the button will dial the stored number.

To Use an Auto Dial Button

1. At dial tone or whenever you want to dial a number, press the programmed auto dial button.
2. The stored number is dialed.

To Create an Auto Dial - Other Button (*Not 1403*)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.
3. Press the programmable button you want to change. Alternatively:
 - Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
 - At the **Button:** prompt press the button to edit or enter from the button number.
4. The current setting of that button is displayed.
5. Press **Program** and either press **Intercom 2** or use the ▲ up or down ▼ arrow buttons to scroll the display to **Auto Dial - Other** and press **Select**.
6. At the **AD-O:** prompt enter the number for calls made using the button. The number can include * and # and the following special characters:
 - The following keys can be used to enter special dialing commands.

Function	Press to insert	Character	Description
Pause	HOLD	P	Inserts a 1.5 second pause.
Transfer	SPEAKER	R	Send a hook-switch flash signal.
Stop	CONFERENCE	S	Stop dialing.

7. The current setting of the button will now be **AD-O** followed by the stored number.
8. To remove the current setting press **Clear**.
 - Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

2.4 Adjusting the Volume

While the phone is connected to a call you can adjust the volume. The volume that gets adjusted will depend on whether you are using the handset, speakerphone or headset at the time you use this process.

1. Use the ▲ up arrow and ▼ down arrow keys to change the volume.

2.5 Mute

While on a call, you can temporarily turn off the microphone so that the caller cannot hear you. You however will still be able to hear the caller.

To mute the microphone press the  **Mute** key. While mute is active, the button is lit.

2.6 Holding Calls

When you put a call on hold, you can make and receive other calls. However, if a call is left on hold for too long, by default 15 seconds, it will automatically alert your phone again if you are not on another call.

To Put a Call on Hold

1. During the call, either press the **HOLD** button or press the button on which the call is taking place. The **Green** light next to the button will change to fast flashing green to show there is a call on hold.

To Return to a Call Put on Hold

1. If already on a call, end the call by pressing **Drop** or put it [on hold](#) ^[25] by either pressing **Hold** or pressing the button which the call is on.
2. Press the button next to the fast flashing **Green** light. You are connected to the call. The light changes to steady.

2.7 Parking Calls

Use this feature to place a call on a special type of hold where it can be retrieved from any extension in the system.

- You should park only one call at a time to ensure that you know which caller you are talking to when you retrieve the parked call.
- If you frequently park calls, program your extension number on an [Auto Dial](#) ^[23] button, so you can park a call simply by pressing that button during the park process.

To Park a Call

1. While on a call, press **TRANSFER** and dial your own extension number.
2. Hang up. If the call is not picked up within three minutes, it rings back at your extension.

To Retrieve a Parked Call

1. Press an **Intercom** or **Call Appearance** button and **6** followed by the extension number of the extension that parked the call.

2.8 Transferring Calls

You can transfer a call to another extension.

1. While the call is active, press **TRANSFER**. The call is put on hold and the green light next to the button flashes rapidly.
2. Make a call to the transfer destination. Then do one of the following:
 - To transfer the call without announcing it (an unsupervised or blind transfer) hang up or press the **Transfer** button again. You can do this as soon as you hear ringing. The transfer is complete. If the call is not answered it will be returned to your extension. When your extension rings, lift the handset to be reconnected to the caller.
 - To announce the call before completing the transfer (a supervised transfer), wait for the call to be answered. If the called party is willing to accept the call hang up or press **Transfer** again. If no one answers or the call is refused, press the button next to the fast flashing green light to be reconnected to the original caller.

2.8.1 Voice Mailbox Transfer

You can transfer a caller to directly to an extension's voice mailbox for the caller to leave a message without first ringing the extension. This feature is useful when you know that the extension user is not present and has not set do not disturb.

You can program a voice mailbox transfer button to transfer a caller directly to a voice mailbox by pressing the button and then dialing the mailbox subscriber's extension number.

To Transfer a Caller to an Extensions Mailbox

1. During the call press **FEATURE 14** or press a **Voice Mailbox Transfer** button you have one programmed.
2. Dial the two digit extension number of the extension for which the caller wants to leave a message. The caller is routed to the mailbox and hears the recorded greeting for that mailbox.
3. Hang up.

To Create a Voice Mailbox Transfer Button (*Not 1403*)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.
3. Press the programmable button you want to change. Alternatively:
 - Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
 - At the **Button:** prompt press the button to edit or enter from the button number.
4. The current setting of that button is displayed.
5. Press **Program** and either dial **#14** or use the ▲ up or down ▼ arrow buttons to scroll the display to **Voice Mailbox Transfer** and press **Select**.
6. The current setting of the button will now be set to **Voice Mailbox Transfer**.
 - Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

 
2.9 Conferencing Calls

The Conference feature allows you to conference other parties (including yourself) into a call. The system supports multiple conferences of up to 64 parties in total, including up to 2 external analog trunk in each conference.

To Create a Conference Call

1. While active on a call, press the **CONFERENCE** button. The first party is now on hold.
2. When you hear dial tone, dial the telephone number of the second party.
3. When the call is answered, press the **CONFERENCE** button again. The second party is added to the call the call. All parties hear a single beep to indicate that they are in a conference call.
4. You can now speak to the first and second parties.
5. Repeat step 2 to add more parties.

To Hold a Conference Call

If you need to answer or make another call during a conference, you can [hold](#)  in the same way as for normal calls. When you put a conference call on hold, the other parties can still talk to each other.

- **! WARNING**

Only hold a conference that you know is taking place on your own telephone system. If you hold a conference that you have joined on another telephone system, that conference will hear hold music.

1. Press the **HOLD** button. The **Green** light next to the button will fast flash to show that the call is on hold.
2. To re-join the conference call press the button next to the **Green** light. You will rejoin the conference.

To Drop Other Parties from the Call

1. While in the conference, press **Drop**.
2. Scroll through the parties in the conference.
3. When the party you want to drop is shown, press **Drop**.

To Remove Yourself from a Conference Call

1. While in the conference call, press **Drop** twice.
2. The remaining parties on the conference hear a double beep.
3. The remaining parties on the conference can still talk to each other. When only one party remains on the call, the call is disconnected.

2.10 Using Handsfree

The telephone has a speaker and microphone which you can control using the **SPEAKER** button.

- To make and answer calls handsfree, use the **SPEAKER** button in the same way as lifting or replacing the handset. The button is lit while the phone is in handsfree mode.
- When you make or answer calls by first pressing an **Intercom**, **Call Appearance** or **Line Appearance** button, the call is automatically connected either on the speaker or headset. Which is used is set by the phone's [Default Hands Audio Path](#) setting.
- If already using the handset, you can switch to handsfree by pressing **SPEAKER**. You can then replace the handset.
- If already connected to a call handsfree, lifting the handset will end the handsfree.

Note

Room acoustics and background noise can affect the proper operation of the speakerphone. To ensure that your speakerphone works effectively, follow these guidelines:



- Avoid placing your telephone in areas with high background noise caused by sources such as motor vehicles, manufacturing equipment, loud voices, radios, printers, copiers, typewriters, other noisy office equipment or heater and air conditioning fans.
- Avoid talking before the other person is finished speaking. When you both talk at the same time, only one person's voice comes through.
- Do not use your speaker to make announcements over a loudspeaker paging system connected to your telephone system.
- When talking, always face your telephone and stay within two feet of it.
- Place your telephone at least six inches (15 cm) away from the edge of your desk.
- If you have difficulty hearing the other party, try increasing the speaker volume. If you have background noise, try turning off the microphone when the party at the other end is speaking and turning it on when you speak. If the difficulty persists, lift your handset to continue the conversation.
- In conference rooms, a separate speakerphone is recommended, since the built-in speaker on a system telephone is designed for individual use.

- **1403 Telephones**

The 1403 telephone has a speaker but no microphone. This allows it to hear page calls and hear the progress of a call when making a call. However, the handset must be used to speak on a call.

2.11 Using a Headset

The telephone (except 1403 phones) has a headset socket which you can control using the  **HEADSET** button.

- To make and answer calls on the headset, use the  **HEADSET** button in the same way as lifting or replacing the handset. The button is lit while the phone is in headset mode.
 - **Remaining in Headset Mode**
If you use the **DROP** key to end a headset call, the phone will remain in headset mode. New calls will alert on the headset. You can use the **Intercom**, **Call Appearance**, **Line Appearance** and **Drop** buttons to make and answer calls while remaining in headset mode.
- If not already in headset mode, when you make or answer calls by first pressing an **Intercom**, **Call Appearance** or **Line Appearance** button, the call is automatically connected either on the speaker or headset. Which is used is set by the phone's [Default Hands Audio Path](#) ^[67] setting.
- If already using the handset, you can switch to headset by pressing  **HEADSET**. You can then replace the handset.

2.12 Joining Calls

Joining is adding yourself to a call in progress.

- **You cannot:**
 - Join an internal call or a conference call at another extension.
 - Join a call at any extension where the extension user has privacy enabled.
 - Put a joined call on hold.
- **You can:**
 - Tell when someone has joined your call when you hear a single beep.
 - Use privacy to allow or prevent others from joining your calls.
 - Join a call that is being answered by the voice messaging system. When you join the call, the voice messaging system disconnects automatically so you can speak to the caller.
 - Dial 68 <Line Number> to join a call on that line if a line is not assigned to a button on your extension.

To Join a Call

A steady red light next to a line button indicates that a call is in progress on that line.

1. If already on a call, end the call by pressing **Drop** or put it [on hold](#) ^[25] by either pressing **Hold** or pressing the button which the call is on.
2. Press the line button next to the steady red light and lift the handset. Alternatively, press and **Intercom** or **Call Appearance** button and dial **68** followed by the two-digit line number.
3. You are now joined with the call. All parties on the call hear a single beep.

To Switch Privacy On or Off

You can use the privacy feature to stop people joining your current call. You can either assign the function to a programmable button or you can dial **Feature 07** to turn privacy on or off.

Chapter 3.

Other Features

3. Other Features

3.1 Absent Text Messages

The absent text message feature assists internal callers by displaying a message on their telephone. When another extension calls your extension, your active absent text message appears on the caller's display.

To set and clear an absent text message you need to assign the feature to a programmable button with lights. The button can then be used to activate, select and deactivate the message.

To Create an Absent Message Button (*Not 1403*)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.
3. Press the programmable button you want to change. Alternatively:
 - Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
 - At the **Button:** prompt press the button to edit or enter from the button number.
4. The current setting of that button is displayed.
5. Press **Program** and either dial **#28** or use the ▲ up or down ▼ arrow buttons to scroll the display to **Absent Message** and press **Select**.
6. The current setting of the button will now be set to **Absent Message**.
 - Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

To Activate an Absent Text Message

1. Press the absent text message button. The first absent text message is displayed.
2. Scroll through the default messages by pressing the button beneath the word **Next** until the required message is displayed.

<ul style="list-style-type: none">• Back soon• Do not disturb• Out to lunch• Away from desk	<ul style="list-style-type: none">• Please Call• At lunch until• Don't disturb until• With cust.til	<ul style="list-style-type: none">• Back tomorrow• On Vacation• At home• Be right back	<ul style="list-style-type: none">• On Holiday until• Meeting until• With visitors until
--	--	---	--

3. Press the button beneath the word **Activ** to select the message shown on the display.
4. To add additional text or edit the existing text, press **More** and then **Edit**.
5. To complete the process press the absent text message button again.

To Deactivate the Absent Text Message

1. Press the absent text message button.
2. Press the button beneath the word **Dactiv**.
3. To complete the process press the absent text message button again.

3.2 Forwarding Calls

All external, internal and transferred calls directed to your extension can be diverted to a different internal extension number. You can enter the destination extension telephone number and select when calls are redirected using a programmed button.

Before you can automatically forward calls you need to assign the feature to a button with lights. The button can then be used to turn call forwarding on and off as required.

- Selected users may also be able to do remote call forwarding where they forward their calls to an external number. If that is the case, consult your system administrator, you can use your [personal speed dials](#) ^[22] as the forwarding destination.
- Some users may also be able to use cell phone connect, again consult your system administrator. With cell phone connect the call will ring at both your extension and at the remote call forwarding destination. This is also called mobile twinning.
- You receive a slow interrupted intercom dialling tone when call forwarding is active.

To Manually Set Forwarding

1. Press **FEATURE 11**.
2. Enter the number to which you want to forward calls.
 - Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

To Manually Cancel Forwarding

1. Press **FEATURE 11**.
2. Enter your own extension number as the destination.
 - Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

To Create a Call Forwarding Button (*Not 1403*)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.
3. Press the programmable button you want to change. Alternatively:
 - Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
 - At the **Button:** prompt press the button to edit or enter from the button number.
4. The current setting of that button is displayed.
5. Press **Program** and either dial **#11** or use the ▲ up or down ▼ arrow buttons to scroll the display to **Call Forwarding** and press **Select**.
6. At the **Call Coverage Orig:** prompt enter the extension number for which the button is being programmed.
7. At the **Call Coverage Dest:** prompt enter the destination extension number for the call coverage calls.
 - To forward to an external number, enter the personal speed dial (80 to 99) that contains the required external number.
 - To forward using cell phone connect/mobile twinning, enter * followed by the personal speed dial (80 to 99) that contains the required external number.
8. The current setting of the button will now be set to **Call Forward O <covered extension> D <destination extension>**.
 - Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

3.3 Call Coverage

Call coverage is used to redirect all intercom, transferred, DID and outside calls on lines assigned to you to another extension. When call coverage is in use, covered calls are routed to the covering extension after a specified number of rings set by the system administrator.

- Group calls, forwarded calls, transfer-return calls and calls to doorphone alert extensions are not covered.
- A single extension can cover multiple extensions, however an extension can have only one covering extension.
- If you activate call coverage at your extension, for calls on a line appearance button, you still can intercept a call rerouted to coverage by pressing the button.
- You can program call coverage on a programmable button. Use a button with lights if you want a visual indication when your calls are being covered. When the button indicator is on, your calls are being covered; when off, call coverage is not active.
- If both call coverage and do not disturb are on, covered calls go immediately to the covering extension without ringing the covered extension. Similarly, if call coverage is on and a call begins to ring, you can turn on [Do Not Disturb](#) ^[38] to send that call immediately for coverage.
- If an extension has call coverage and [VMS Cover](#) ^[46] active, calls ring at the covering extension.
 - If the covering extension does not answer, the call is routed to the voice mailbox of the covered extension after the specified number of VMS Cover Rings. If the covering extension has [Do Not Disturb](#) ^[38] active, the call is routed immediately to voicemail.
- If an extension has call coverage active without voice mail coverage, covered calls ring at the covering extension for the specified number of call coverage rings. Outside and intercom calls continue to ring at the covering extension until the call is answered or the caller hangs up.
- For transferred calls, if the covering extension does not answer, the call goes to the transfer return extension after the specified number of Transfer Return Rings (if VMS cover is not active).
- Call forwarding override call coverage. If an extension has call coverage and call forwarding active, calls are routed to the call forwarding destination extension.

To Send Calls to Coverage

1. Press **FEATURE 20**.
2. Dial the extension number of the covering extension.

To Remove Call Coverage

1. Press **FEATURE 20**.
2. Dial your own extension number.

To Create a Call Coverage Button (*Not 1403*)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.
3. Press the programmable button you want to change. Alternatively:
 - Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
 - At the **Button:** prompt press the button to edit or enter from the button number.
4. The current setting of that button is displayed.
5. Press **Program** and either dial **#20** or use the ▲ up or down ▼ arrow buttons to scroll the display to **Call Coverage** and press **Select**.
6. At the **Call Coverage Orig:** prompt enter the extension number for which the button is being programmed.
7. At the **Call Coverage Dest:** prompt enter the destination extension number for the call coverage calls.
8. The current setting of the button will now be set to **Call Coverage O** *<covered extension>* **D** *<destination extension>*.
 - Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

To Use a Call Coverage Button

1. Press the programmed button. When on, if programmed on a button with a light, the light will be on.

3.4 Locking Your Extension

You can use the lock feature to prevent unauthorized people from making outside calls from your extension while you are away from the extension. The user of the first extension on the system can unlock extensions without needing to know the code used to lock the phone. They can do this using **FEATURE 22**.

To Lock Your Extension

1. Press **FEATURE 21**.
2. Dial a four digit code using the 0 to 9 numbers .
3. Redial the four digit code.

To Unlock Your Extension

1. Press **FEATURE 21**.
2. Dial the four digit code you used to lock the extension.

To Create a Station Lock Button (*Not 1403*)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.
3. Press the programmable button you want to change. Alternatively:
 - Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
 - At the **Button:** prompt press the button to edit or enter from the button number.
4. The current setting of that button is displayed.
5. Press **Program** and either dial **#21** or use the ▲ up or down ▼ arrow buttons to scroll the display to **Station Lock** and press **Select**.
 - The first two extensions on the system can also assign the function Station Unlock to a button for use to unlock other extensions.
- Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

3.5 Account Codes

An account code is typically used to identify a department, project, or client for charge-back or tracking purposes. An account code can be either forced or optional. When an extension is set up with the forced account code feature, the user must enter an account code before they can dial outside calls

To Manually Enter an Account Code

1. After lifting the handset (or while already active on an outside call), press **FEATURE** and dial **12**.
2. Enter an account code by dialing the account code using the telephone's dial pad.
3. Press **Done**.
4. Continue with the call.

To Use an Account Code Button

1. After lifting the handset or while already active on an outside call, press the **Account Code Entry** button.
2. Enter an account code using the telephone's dial pad. Press the **Account Code Entry** button again or press the **Done** button.
3. Continue with the call.

To Create an Account Code Entry Button (*Not 1403*)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.
3. Press the programmable button you want to change. Alternatively:
 - Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
 - At the **Button:** prompt press the button to edit or enter from the button number.
4. The current setting of that button is displayed.
5. Press **Program** and either dial **#12** or use the ▲ up or down ▼ arrow buttons to scroll the display to **Account Code Entry** and press **Select**.
6. The current setting of the button will now be set to **Account Code Entry**.
 - Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

3.6 Do Not Disturb

Use this feature to be able to press a programmed button to prevent incoming calls for the extension from ringing (lights may still flash). You can still use the extension to make calls and to answer calls using line appearance buttons.

- You need to program a button with lights. When the Do Not Disturb feature is on, the light is also on, indicating that the telephone will not ring.
- Use Do Not Disturb when you do not want the auto attendant or the voice messaging system to transfer calls to you.
- Use Do Not Disturb if you are assigned to a Hunt Group and you leave your desk, so calls to the Hunt Group will skip your extension and ring immediately at the next available extension in the group.
- To avoid missing calls when Do Not Disturb is not needed, turn it off.
- Unanswered calls that are transferred from an extension with Do Not Disturb active, ring at that extension if they transfer return.
- Users with [VMS Cover](#) ^[46] turned on can activate Do Not Disturb to send all calls immediately to their voice mailbox.
- Users with [Call Coverage](#) ^[34] turned on can activate Do Not Disturb to send all calls immediately to the covering extension.
- You receive a slow interrupted intercom dialling tone when Do Not Disturb is active.

To Manually Switch Do Not Disturb On/Off

1. Dial **FEATURE 01**.

To Create a Do Not Disturb Button (Not 1403)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.
3. Press the programmable button you want to change. Alternatively:
 - Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
 - At the **Button:** prompt press the button to edit or enter from the button number.
4. The current setting of that button is displayed.
5. Press **Program** and either dial **#01** or use the ▲ up or down ▼ arrow buttons to scroll the display to **Do Not Disturb** and press **Select**.
6. The current setting of the button will now be set to **Do Not Disturb**.
 - Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

To Add Do Not Disturb Exceptions

You can create a set of up to 20 numbers, calls from which are able to still ring you even when you have do not disturb switched on.

1. At the extension, press **Admin**.
2. Use the ▲ up or down ▼ arrow buttons to scroll the display to **Telephone Programming**. When displayed, press **Select**.
3. Use the ▲ up or down ▼ arrow buttons to scroll the display to **DND Exceptions**. When shown, press **Select**.
2. The current entries are displayed. Use the ▲ up or down ▼ arrow buttons to scroll through the list of numbers.
 - To delete the currently displayed number press **Delete**.
 - To add a new number start dialing or press **Add**. Dial the number and click **Save**.
- Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

Chapter 4.

Using Voicemail

4. Using Voicemail

Each extension on the system has a voicemail mailbox by default. The message lamp on your phone is lit when you have new messages in your mailbox.

Except for special cases, for example the extensions connected to the fax machine and loudspeaker, the mailboxes are used when the extension has calls it does not answer within a set time (by default 15 seconds though this can be adjusted for each extension by the system administrator).

In addition to [accessing your mailbox](#)^[41] and [listening to your messages](#)^[42], you can perform a range of other actions:

 
- [Record Your Name](#)^[43]
You can replace the extension number played to callers with a recording of your name.
- [Set an Access Code](#)^[44]
You can set an access code that must be entered whenever you try to access your mailbox.
- [Record a Greeting](#)^[45]
You can replace the default greeting asking a caller to your mailbox to leave a message with your own recorded greeting.
- [Switch Voicemail Cover On/Off](#)^[46]
You can select whether voicemail should be used to cover calls ringing at your extension.
- [Forward a Message](#)^[47]
You can forward a message to another extension or extensions. You can also add your own comments to the message.
- [Call a Message Sender](#)^[47]
If the message includes the caller ID, you can initiate a call back to the message sender.
- [Voicemail Email](#)^[48]
You can use email to receive notification of a new voicemail message.
- [Visual Voice](#)^[50]
Phone users (except 1403) can access their mailbox using a series of menus on the phone's display.

4.1 Accessing Your Mailbox

Your system administrator can also configure other methods of access including access to your mailbox from other phones.

Accessing Your Mailbox

- Press an idle intercom or call appearance button and dial **777**.
 - To access your mailbox from another extension, dial **778** and enter your own extension number when asked which mailbox you want to access.
- If your mailbox has an [access code](#) ⁽⁴⁴⁾ set, you will be prompted to enter it. Enter your access code.
- You will hear a prompt telling you how many messages you have. If you have any new messages the voicemail system will start playing your new messages.
- You can use the controls indicated below to manage your mailbox and messages.

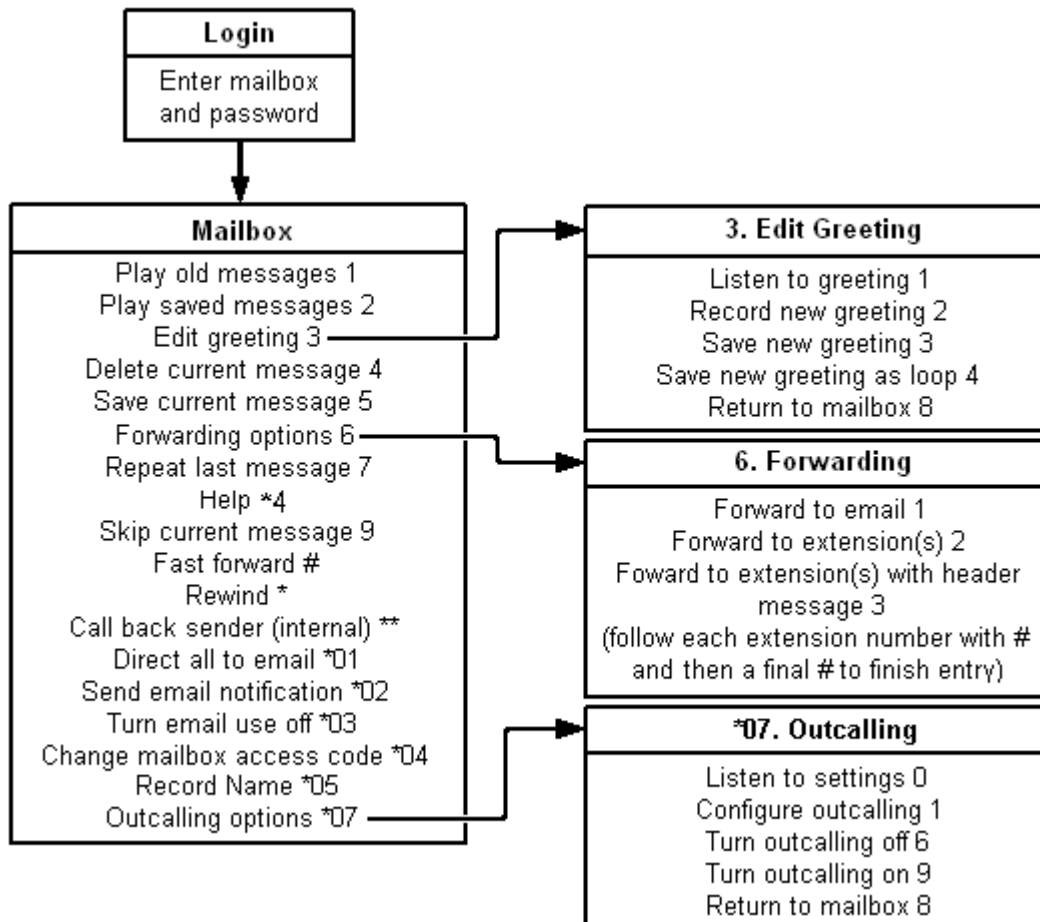


IMPORTANT

Once a new message has been listened to, it is marked as 'old' and is automatically deleted after 24 hours. If you do not want the message deleted, you must mark it as 'saved' by pressing **5** while listening to the message.

4.2 Listening to Your Messages

When you log in to your mailbox you are automatically played any new messages. After a message has been played it is marked as being an old message. Old messages are automatically deleted after 24 hours unless you mark the message as saved.

 Whether listening to new, old or saved messages, the messages are played back in order of oldest first.

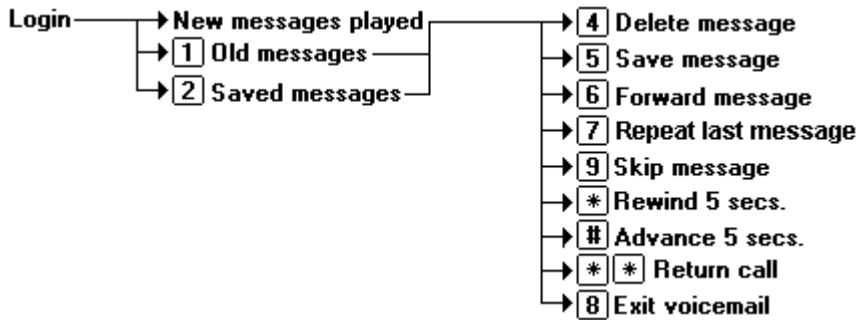

When you listen to any of your messages you have the following options:

- Press **4** to delete the message.
- Press **5** to save the message.
- Press **6** to forward the message. See [Forwarding a Message](#)^[47].
- Press **7** to repeat the last message.
- Press **8** to exit voicemail.
- Press **9** to skip to the next message.
- Press ***** to rewind the message a few seconds.
- Press **#** to advance the message a few seconds.
- Press ****** to return the call. See [Replying to Messages](#)^[47].

To listen to old messages

1. [Login](#)^[47] to your mailbox.
2. Press **1** to listen to your old messages.

To mark a message as saved

Once you have played a message it is marked as old. Old messages are automatically deleted after 24 hours. To stop this happening to the current message, you can mark it as being a saved message.

1. Press **5** when listening to a new or old message.

To listen to saved messages

1. [Login](#)^[47] to your mailbox.
2. Press **2** to listen to your saved messages.

 
To mark a message as new

While listening to old or saved messages you can reset the message back to being treated as a new message. This will cause the message waiting indicator on the phone to be lit again. Note however that if you are using voicemail email it will not send a new message email.

1. Press ***06** while listening to the old or saved message.

4.3 Record Your Name

You can record your name if required. Your name recording is then used for various features such as telling callers which mailbox they have reached rather than just stating the extension number.




To record or change your greeting

1. [Login](#) to your mailbox.
2. Press ***05** to select the option to record your name.
3. Press **1** to hear your current name recording.
4. Press **2** to record your name. .
5. When you are prompted speak your name. The maximum length that can be recorded is 5 seconds.
6. Press **2** when you have finished recording your name.
7. Press **1** to listen to your new name recording. After you have listened you can:
 - Press **3** to save the new recording.
 - Press **2** to record the new name again.

4.4 Changing Your Access Code

You can set an access code for your mailbox. If you set an access code, it will be requested whenever you access the mailbox to collect messages. When changing your access code:

 - Enter at least four digits. If you enter less than four digits you will be prompted to enter a longer code.
- Do not set an obvious code, for example:
 - Do not match your extension number.
 - Do not use a sequence of digits, for example 1234.
 - Do not use the same repeated digit, for example 1111.
- If you forget your access code, your system administrator can clear it.



To change your access code

1. [Login](#) ⁽⁴²⁾ to your mailbox.
2. Press ***04** to change your access code.
3. Enter your current access code and press **#**. If you have no current access code just press **#**.
4. Enter your new access code followed by **#**. The access code must be between 4 and 15 digits in length.
5. Re-enter your new access code followed by **#**. The access code will now be changed.
 - The system will prompt you if the codes do not match or is not acceptable. It will also confirm the change of access code if successful.

 
To remove your access code

1. Log in to your mailbox.
2. Press ***04** to change your access code.
3. Enter your current access code and press **#**.
4. When you are asked to enter your new access code, press **#**.
5. When you are asked to re-enter your access code, press **#**. Your access code will have been removed.

4.5 Changing Your Greeting

By default the system plays a general greeting to callers who are directed to your mailbox. That general greeting states your extension number, or name if you have [recorded one](#) ^[43], and asks the caller to leave a message after the tone. You can override the default greeting by recording your own personal greeting.

Callers can skip your greeting by pressing 1. Instead they will hear the tone and can leave their message immediately. This does not work if your greeting is set to play as a continuous loop.

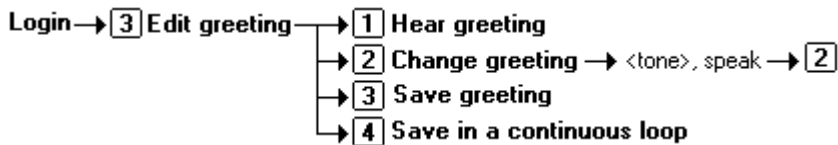

To listen to your greeting

1. [Login](#) ^[47] to your mailbox.
2. Press **3** to select the option to edit your greeting.
3. Press **1** to hear your greeting. If no greeting has been recorded you will hear *"The message has not yet been recorded"*. You need to record a message.

To record or change your greeting

1. [Login](#) ^[47] to your mailbox.
2. Press **3** to select the option to edit your greeting.
3. Press **2** to change your greeting.
4. When you are prompted speak your new greeting.
 - The greeting must be longer than 3 seconds.
 - A long (approximately 10 seconds) period of silence will disconnect you from voicemail.
5. Press **2** when you have finished recording your greeting.
6. Press **1** to listen to your new greeting. After you have listened to your greeting you can:
 - Press **3** to save the new greeting. Your new greeting will be used.
 - Press **2** to re-record the new greeting.
 - Press **4** to save the new greeting for playing on a continuous loop. This option can be used to continually play the greeting to a caller; the caller will not be able to leave a message. Note that once this option is selected, the greeting cannot be changed back to a normal greeting except by recording a new greeting.

4.6 Voicemail Coverage On/Off

You can choose to have calls to your extension be rerouted to your voicemail mailbox if you do not answer the call within a set number of rings, the default being 3 rings. This is called VMS Cover. The number of rings used for your extension is set by your system administrator.

 
- If an extension has [Call Coverage](#) [34] and VMS Cover active, a covered call rings at the covered extension for the specified number of Call Coverage Rings. If the covering extension does not answer, the call is routed to the voice mailbox of the extension that activated Call Coverage after the specified number of VMS Cover Rings. The count of VMS cover rings starts when the covered extension initially begins to ring. If the covering extension has [Do Not Disturb](#) [38] active, the call is routed immediately to the voice mailbox of the extension that activated Call Coverage.
- Users with VMS Cover turned on can activate [Do Not Disturb](#) [38] to send ringing calls immediately to their voice mailbox.
- Note that when your voicemail cover is off, you can still access the messages in your mailbox and other users can still use [forwarding](#) [47] to send messages to your mailbox.

To create a VMS cover button (Not 1403)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.
3. Press the programmable button you want to change. Alternatively:
 - Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
 - At the **Button:** prompt press the button to edit or enter from the button number.
4. The current setting of that button is displayed.
3. Press **Program** and either dial **#15** or use the ▲ up or down ▼ arrow buttons to scroll the display to **VMS Cover** and press **Select**.
4. The current setting of the button will now be set to **VMS Cover**.
- Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

4.7 Forwarding a Message

You can forward a message to a different mailbox or to several mailboxes at the same time. When you forward a message you can record your own comment to the start of the message.




To forward a message

1. When you are listening to a message, press **6**.
 - To forward the message without adding a comment press **2**.
 - To forward the message after adding a comment at the start press **3**. Record your comment after the tone. Record your comment and press **#** to finish recording.
2. Enter the extension number to which you want to forward the message and press **#**.
 - If you want to send the message to more than one mailbox enter each mailbox extension number separated by a **#**.
3. Press **#** to finish addressing and forward the message.

4.8 Calling a Message Sender

 You can call the person who left a message in your mailbox. Both internal and external callers can be called back. For external callers, you can only reply if their caller ID was available when the message was left.




To reply to a voice message

1. While you listen to a message, press ******. If a caller ID was received when the message was left, a call will be placed to that number.

4.9 Voicemail Email


You can have notification of new messages sent to your email address. The notification can be a simple alert to tell you that you have a message or a copy of the voicemail message if required.

 In order to use this feature your system administrator must configure your phone system to use email and enter your email address into the system configuration. If this has not been done you will hear '*Email is not enabled on this mailbox*' whenever you try to use an email option.



To switch on email notification

 You can set up your mailbox so that any messages received in future are forwarded to your email address. The messages are not stored in your voicemail mailbox.

1. [Login](#)  to your mailbox.
2. Select the required type of email notification.
 - For a email alert press ***02**.
 - To have the message forwarded to your email, press ***01**.

To forward a message to email

If you are listening to a message you can send the message to your email either whilst listening to it or immediately after it has been played.

1. During or immediately after playing a message, press **6**.
2. Press **1**. The message is forwarded to your email address.

To switch off email notification

If you have chosen any of the email notification options, you can switch them off from your telephone.

1. Log into your mailbox.
2. Press ***03**. You hear a confirmation message to tell you that the option is now turned off.

4.10 Outcalling

You can have the voicemail system call a number that you have set whenever you receive a new message. This option is only supported on systems running IP Office Release <%BOMBAY%> or higher. Embedded voicemail outcalling only supports a single destination number with no escalation and no time profiles.

- *07 Outcalling**
- **0 Listen to settings**
 - **1 Set destination number and timeout**
 - **6 Switch outcalling off**
 - **9 Switch outcalling on**

Each outcalling call alert will ring for a duration that you can set, the default is 15 seconds. If the call is not answered, it will end the call. If the outcalling call is answered, you will be prompted to enter your [mailbox access code](#)^[44]. If you don't have an access code set, it will ask for your extension number instead. The outcalling call is ended if:

- You press *# to indicate that you do not want any more outcalling calls for the current new messages.
- You enter the wrong access code 3 times.
- More than 5 minutes passes with no response.

Up to 4 outcalling calls are attempted, with a minimum of 15 minutes between calls, unless you answer and press *# or access your mailbox by another method. If you receive any more new messages in the meantime they do not restart the outcalling attempts.

To Set Your Outcalling Destination

1. [Log in to your mailbox](#)^[41].
2. Press ***07** to access your outcalling settings.
3. Press **1**.
4. Press **2** for number entry.
5. Press **1** and then enter the number which you want outcalling to call. Remember to include any external dialing prefix that you would normally dial to make the call.
 - A * in the number is treated as a pause (1.5 seconds) in the dialing.
 - To enter a # into the number, dial ***#**.
 - You can also use internal numbers as your outcalling destination. The calls will follow any internal forwarding and will honor do not disturb. However the outcalling attempt is ended if the call goes to voicemail.
6. Press **#** to finish number entry.

To Set Your Outcalling Timeout

The timeout control how long the outcalling call will ring the destination number before hanging up if not answered. The default is 15 seconds.

1. [Log in to your mailbox](#)^[41].
2. Press ***07** to access your outcalling settings.
3. Press **1**.
7. Press **3** for timeout entry.
8. Enter a number between 5 and 59 and then press **#**.

Turning Outcalling On

1. [Log in to your mailbox](#)^[41].
2. Press ***07** to access your outcalling settings.
3. Press **9** to switch outcalling on.

Turning Outcalling Off

1. [Log in to your mailbox](#)^[41].
2. Press ***07** to access your outcalling settings.
3. Press **6** to switch outcalling off.

4.11 Visual Voice

You can access your mailbox messages and settings using a series of menus displayed on the phone (not 1403). This is called **Visual Voice**.

To access visual voice press the **MESSAGE** button on the phone. The controls available are:

- **Listen**

Access your own voicemail mailbox. When pressed the screen will show the number of **New**, **Old** and **Saved** messages. Select one of those options to start playback of messages in that category. Use the ▲ up arrow and ▼ arrow keys to move through the message. Use the options below

- **Listen**
Play the message.
- **Pause**
Pause the message playback.
- **Delete**
Delete the message.
- **Save**
Mark the message as a saved message.
- **MkNew**
When playing old or saved messages, you can reset the message to be marked as a new message again. This message waiting indicator is lit again (however no voicemail email is resent).
- **Call**
Call the message sender if a caller ID is available.
- **Copy**
Copy the message to another mailbox. When pressed a number of additional options are displayed.

- **Message**

Record and send a voicemail message to another mailbox or mailboxes.

- **Greeting**

Change the main greeting used for callers to your mailbox. If no greeting has been recorded then the default system mailbox greeting is used.

- **Email**

This option is only shown if you have been configured with an email address for voicemail email usage by the System Administrator. This control allows you to see and change the current voicemail email mode being used for new messages received by your voicemail mailbox. Use **Change** to change the selected mode. Press **Done** when the required mode is displayed. Possible modes are:

- **Password**

Change the voicemail mailbox password. To do this requires entry of the existing password.

- **Voicemail**

Switch voicemail coverage on/off.

Using the Visual Voice Button for Voicemail Transfer


If pressed when you have a call is connected, the **MESSAGE** button allows entry of an extension number for direct to voicemail transfer of the connected call.

Chapter 5.

Contacts

5. Contacts






The contacts directory contains system directory number, systems users and hunt groups and your own personal contacts. Not available on 1403 phones.

This menu is accessed by pressing the  key. It is used to display names and numbers that you can then use for making calls.



The directory includes names stored for use by all users, names stored for use by just you and the name and numbers of all the other users and groups on the phone system.

5.1 Viewing Contacts Details

 
 
 
1. Access the contacts directory:

- a. Press the  **CONTACTS** key. The directory menu is displayed.
- b. Use the  left and right  arrow keys to select which type of directory entries you want displayed.
 - **All**
All directory entries.
 - **Personal**
Your personal speed dials.
 - **External**
The system speed dials.
 - **Users**
The names and numbers of other users on the telephone system.
 - **Groups**
The names and numbers of hunt groups on the telephone system.
- c. Either press the **List** soft key to display all the directory entries or start dialing the name to display only matching entries.
- d. Use the  up and down  arrow keys to scroll through the matching entries. To return to the start to match a different directory selection, press the **Clear** soft key.

2. When the required entry is displayed, press **Details** to display the name and number.






3. Use the  up and down  arrow key to switch between the name and the number.

4. The range of soft keys available will depend on the type of directory entry:

- **Call** 
Make a call to the stored number.
- **Back**
Go back to the directory listing.
- **More**
If the contact is one of your personal directory entries, the **More** soft key will be present to allow you to access the options below. It is also present for external directory entries if you are a system administrator (either of the first two extensions on the system).
- **Edit** 
Edit the name and number.
- **Delete** 
Delete the name and number.








5.2 Make a Call from the Directory

You can use any directory contacts to make a call. You can also use the directory in almost any telephone function where you need to select the number for a destination, for example during transfers.

- On a key mode system, to call an internal number, you need to press an **Intercom** button before selecting the number from the directory.
1. Access the contacts directory:
 - a. Press the  **CONTACTS** key. The directory menu is displayed.
 - b. Use the  left and right  arrow keys to select which type of directory entries you want displayed.
 - **All**
All directory entries.
 - **Personal**
Your personal speed dials.
 - **External**
The system speed dials.
 - **Users**
The names and numbers of other users on the telephone system.
 - **Groups**
The names and numbers of hunt groups on the telephone system.
 - c. Either press the **List** soft key to display all the directory entries or start dialing the name to display only matching entries.
 - d. Use the  up and down  arrow keys to scroll through the matching entries. To return to the start to match a different directory selection, press the **Clear** soft key.
 2. When the required entry is displayed, press **Call**.
 3. Continue as for a normally dialed call.






5.3 Editing a Contact

You can edit the contacts in your own personal directory.

1. Access your personal directory contacts:
 - a. Press the  **CONTACTS** key. The directory menu is displayed.
 - b. Use the  left and right  arrow keys to select your **Personal** directory. The first two extensions on the system can also add, edit and delete entries from the **External** directory.
 - c. Either press the **List** soft key to display all the directory entries or start dialing the name to display only matching entries.
 - d. Use the  up and down  arrow keys to scroll through the matching entries. To return to the start to match a different directory selection, press the **Clear** soft key.
2. Locate the required entry.
3. Press the **Details** soft key.
4. Press the **More** soft key and then the **Edit** soft key.
 - The menu now allows editing of the name and number.
 - Use the  up and down  arrow keys to switch between number and name entry.
 - When the name has been entered as required, press the **OK** soft key.
 - When the number has been entered as required, press the **Save** soft key.
 - To exit without making any changes, press the **Cancel** soft key.




 

5.4 Adding a New Contact

So long as the telephone system capacity has not been reached, you can add up to 100 personal directory entries.

1. Access your personal directory contacts:
 - a. Press the  **CONTACTS** key. The directory menu is displayed.
 - b. Use the  left and right  arrow keys to select your **Personal** directory. The first two extensions on the system can also add, edit and delete entries from the **External** directory.
2. Press the **New** soft key.
 - The menu now allows editing of the name and number.
 - Use the  up and down  arrow keys to switch between number and name entry.
 - When the name has been entered as required, press the **OK** soft key.
 - When the number has been entered as required, press the **Save** soft key.
 - To exit without making any changes, press the **Cancel** soft key.






5.4.1 Add a Contact from the Call Log

You can add a name and number shown in your call log to your personal speed dials. You can only do this if there is space in your allowed 20 personal speed dials.

1. Access the call log.
 - a. Press the  **CALL LOG** or **HISTORY** button.
 - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
 - c. Use the  up and down  arrow keys to scroll through the records.
2. Press the **Details** soft key. The individual details of the currently selected call record are displayed.
3. Press the **+Contact** soft key.
4. Use the  up and down  arrow keys to switch between the name and number details for the new contact.
5. Using the telephone keypad and the **Bksp** soft key you can edit the name and the number. When editing the number, use the **Pause** soft key to enter a comma (,) for a 1 second pause in the number dialing.
6. When the name and number are set as required, press the **Save** soft key. To return without saving the name and number, press the **Cancel** soft key.

5.5 Deleting a Contact

You can delete a personal speed dial from your contacts.

1. Access your personal directory contacts:
 - a. Press the  **CONTACTS** key. The directory menu is displayed.
 - b. Use the  left and right  arrow keys to select your **Personal** directory. The first two extensions on the system can also add, edit and delete entries from the **External** directory.
 - c. Either press the **List** soft key to display all the directory entries or start dialing the name to display only matching entries.
 - d. Use the  up and down  arrow keys to scroll through the matching entries. To return to the start to match a different directory selection, press the **Clear** soft key.
2. Locate the required entry.
3. Press the **Details** soft key.
4. Press the **More** soft key and then the **Delete** soft key.

Chapter 6.




 
 
 
 
 
Call Log

6. Call Log

This menu is accessed by pressing the  **CALL LOG** or **HISTORY** key. Not available on 1403 phones.




- [Making a Call](#) 
- [Viewing Call Details](#) 
- [Deleting a Record](#) 
- [Deleting All Records](#) 
- [Add a Record to Your Contacts](#) 

6.1 Using the Call Log

1. Access the call log.
 - a. Press the  **CALL LOG** or **HISTORY** button.
 - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
 - c. Use the  up and down  arrow keys to scroll through the records.
2. Pressing **OK** will make a call to the number stored with the currently displayed record.
3. You can use the functions listed at the bottom of the display by pressing the soft key below the function name.
 - [Call](#) 
Make a call to the number stored in the currently displayed call log record.
 - [Details](#) 
Display more details about the current call log record. You can then also [add the caller details to your personal directory](#)  if required.
 - **More**
Switch between the different sets of available soft key functions.
 - [Delete](#) 
Deletes the current displayed record.
 - [Del All](#) 
Delete all the call log records, not just the current types of records being shown.
4. To exit the call log, press the **PHONE/EXIT** button.




 
 
6.2 Making a Call from the Call Log

You can use the call log to make calls to the number included in the currently selected call record.

1. Access the call log.
 - a. Press the  **CALL LOG** or **HISTORY** button.
 - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
 - c. Use the  up and down  arrow keys to scroll through the records.
2. Press the **Call** soft key or **OK** to call the number displayed in the call record.




6.3 Viewing Call Details

You can view additional details about the currently shown call.

1. Access the call log.
 - a. Press the  **CALL LOG** or **HISTORY** button.
 - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
 - c. Use the  up and down  arrow keys to scroll through the records.
2. Press the **Details** soft key. The individual details of the currently selected call record are displayed.
3. Use the  up and down  arrow keys to scroll through the details. The possible values are:
 - **Time**
The time of the call.
 - **Ring Time**
For missed calls, the duration of ringing is included in the call details.
 - **Duration**
The length of the call.
 - **Name**
The name of the caller if known.
 - **Number**
The number of the caller if available.
 - **Reason**
The type of call record, ie. **Answered**, **Outgoing** or **Missed**. For missed calls, the reason may be indicated, for example:
 - Missed: Lost - Indicates a call where the caller hung up before they could be answered.
 - Missed: Voicemail - Indicates a call where the caller was redirected to voicemail.
 - **Count**
How many time a call of the same type, name and number has occurred. Only the details of the most recent call are kept in your call log. However, the count will indicate if the caller has rung or has been rung several times.
4. While you are in the details of a call record, the soft key functions available are:
 - **Call**
Call the number shown in the call record. You can also do this by pressing the **OK** button.
 - **+Contact**
Add the name and number to your personal directory. You can edit the details before they are added.
 - **Back**
Go back to the normal call screen to select another call record.




6.4 Deleting a Record

You can delete the currently displayed call record.

1. Access the call log.
 - a. Press the  **CALL LOG** or **HISTORY** button.
 - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
 - c. Use the  up and down  arrow keys to scroll through the records.
2. Press the **More** soft key.
3. Press the **Delete** soft key to delete the currently displayed call log record.


 

 

6.5 Deleting All Records

You can delete all call records from your call log.

1. Access the call log.
 - a. Press the  **CALL LOG** or **HISTORY** button.
 - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
 - c. Use the  up and down  arrow keys to scroll through the records.
2. Press the **More** soft key.
3. Press the **Del All** soft key to delete all your call log records.

6.6 Adding a Record to Your Contacts

You can add a name and number shown in your call log to your personal speed dials. You can only do this if there is space in your allowed 20 personal speed dials.

1. Access the call log.
 - a. Press the  **CALL LOG** or **HISTORY** button.
 - b. The display will change to show your call log records. The caller's name is shown if known, otherwise the number.
 - c. Use the  up and down  arrow keys to scroll through the records.
2. Press the **Details** soft key. The individual details of the currently selected call record are displayed.
3. Press the **+Contact** soft key.
4. Use the  up and down  arrow keys to switch between the name and number details for the new contact.
5. Using the telephone keypad and the **Bksp** soft key you can edit the name and the number. When editing the number, use the **Pause** soft key to enter a comma (,) for a 1 second pause in the number dialing.
6. When the name and number are set as required, press the **Save** soft key. To return without saving the name and number, press the **Cancel** soft key.

Chapter 7.

Button Programming

7. Button Programming

You can assign functions to the programmable buttons on your phone. However, you cannot override any **Intercom**, **Call Appearance** or **Line Appearance** buttons assigned by the system and your system maintainer.

7.1 Programming a Button

Use the following process to set or change the function of a button.

- You cannot override any **Intercom**, **Call Appearance** or **Line Appearance** buttons assigned by the system and your system maintainer.
- Some functions are unique, ie. if already assigned to a button, assigning the function to another button will automatically clear the setting from the existing button.

1. At the extension press **Admin**.

2. Use the ▲ up or down ▼ arrows to scroll to **Telephone Programming**. Press **Select**.

 
3. Press the programmable button you want to change. Alternatively:

- Use the ▲ up or down ▼ arrows to scroll to **Button Programming**. Press **Select**.
- At the **Button:** prompt press the button to edit or enter from the button number.

4. The current setting of that button is displayed.

- To remove the function, press **Clear**.
 - To change the function, press **Program**.
 - Use the ▲ up and down ▼ arrow buttons to scroll through the menu options and select the required [button function](#) ⁶⁷.
- Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

7.2 Button Functions

You can [assign](#)  the following functions to programmable buttons on your phone.

Function	Description
Absent Message	This function allows you to set or clear an absent message for display on you phone. When set, the absent message is also displayed on other extensions when they call the user.
Account Code Entry	This function allows you to enter an account code prior to making a call or during a call.
Active Line Pickup	This function allows you to answer a call on a particular line. It can be used if the call is ringing, held or already answered by another extension.
Auto Dial Intercom	This function allows you to make a call to another specified extension. The button lamp will also indicate when that other extension is in use.
Auto Dial Other	This function allows you to make a call using a number stored with the button. The number can be an internal number, an external number, an account code or any other number. The button can then be used when a number of that type needs to be dialed.
Call Coverage	This function allows you to switch call coverage on or off. When on, any calls to you that ring unanswered also start ringing at your call coverage extension.
Caller ID Log	This function allows you to view the phone system's call log of all caller IDs of calls received by the system. To use this you must be one of the three extensions configured for call ID logging by your system administrator.
Call Forwarding	This function allows you to redirect all your calls to another number. If the system administrator has configured your for Remote Call Forwarding, you can forward calls externally by specifying a personal speed dial as the destination.
Call Pickup	This function allows you to pickup a call alerting at a specified extension. Separate buttons can be created for each extension for which call pickup is required.
Caller ID Inspect	This function allows you to see the caller ID of a call on another line without interrupting the current call to which you are connected.
Caller ID Name	This function allows you to swap the display of caller ID name and number information on the phone.
Calling Group	This function allows you to call or page the calling group represented by the button.
Conference Drop	This function allows you to select and drop a call from a conference.
Contact Closure	This function you to operate the system's contact closure 1 or 2 connection. To use this you must be a member of the system's contact closure group.
Do Not Disturb	This function allows you to switch do not disturb on or off.
Hot Dial	This function allows you to dial a stored number without first going off hook or pressing the SPEAKER button.
Hunt Group	This function allows you to call or page the hunt group represented by the button.
Idle Line Pickup	This function allows the user to seize a line if that line is idle. This allows the user to access line for which they do not have a line appearance button on their extension.
Last Number Redial	This function allows you to redial the last external number dialed.
Message Alert Notification	This function allows you to see the current state of other user's message waiting lamps. It is used in conjunction with other users for which you have Auto Dial - Intercom buttons.
Night Service	A night service button is used to switch night service on/off. It can only be used on the first extension in the system.
Pickup Group	This function allows you to answer a call being presented to any extension that is a member of the pickup group (1 to 4) configured for the button.
Privacy	This function allows you to turn privacy on or off. When on, other extensions are not able to bridge into your calls.
Recall	This function allows you to send a recall or hook flash signal.

Saved Number Redial	This function allows you to save the number dialed during a call and to redial that number when idle. This can be used when the number dialed does not answer.
Station Lock	This function allows you to lock and unlock your extension from being used to make calls. When selected, you are prompted to enter a four digit code after which the extension is locked. If the extension is already locked, use of this function prompts for reentry of the four digit code to unlock the extension.
Station Unlock	This function can only be used by the first two extensions in the system. It allows the user to unlock any extension without needing to know the code that was used to lock that extension.
VMS Cover	This function allows the you to switch use of voicemail coverage for your extension on or off.
Voice Mailbox Transfer	This function allows you to transfer your current call to another extension's mailbox. Your current call is put on hold and you enter the target extension number to indicate the mailbox required.
Wake Up Service	A Wake Up Service button can be assigned for the first extension on the system. Using this button, the extension user can set wake up calls within the next 24-hours period for any other extension.

Chapter 8.

Phone Settings

8. Phone Settings

8.1 Naming Your Extension

You can assign a name to your extension, up to 20 characters long. The name is then displayed on the phone and also on other extensions when you make or receive calls.

To change your extension name (*Not 1403*)

1. At the extension press **Admin**.
2. Use the ▲ up or down ▼ arrow buttons to scroll the display to **Telephone Programming**. When displayed, press **Select**.
3. Use the ▲ up or down ▼ arrow buttons to scroll the display to **Extension Name**. When displayed, press **Select**.
4. The current setting is displayed. To remove the current name, press **Clear**.
5. To enter a new name, press **Enter** and dial the characters using the dial pad buttons. When finished press **OK**.
 - Enter a character by pressing the indicated button until that character is displayed. If you pause more than 1 second after press a button, the cursor will move onto the next space.

1	1.,@	2	abc2	3	def3
4	ghi4	5	jkl5	6	mno6
7	pqrs7	8	tuv8	9	wxyz9
*	*	0	Space 0	#	#

- The first character and the first character after a space are automatically capitalized.
 - Use the ◀ left and right ▶ arrows keys to move the cursor. Press **Bksp** to delete the character before the cursor.
 - Do not use punctuation characters such as #, ?, /, -, _ and , in the name. Start the name with an alphabetic character. Note that the name is case sensitive and must be unique. Non-English languages do not offer accented characters.
- Exit programming by pressing **PHONE/EXIT**. Alternatively use the **Back** button to move to another menu.

8.2 Visual Alerting

The message waiting lamp at the top-right corner of the phone can also be used to indicate when you have a call alerting your phone. The lamp is flashed to indicate a call waiting to be answered.

1. Press the **A MENU** button.
2. Use the ▲ up and down ▼ arrow keys to locate the option **Call Settings...**. Press the **Select** soft key.
3. Use the ▲ up and down ▼ arrow keys to locate the option **Visual Alerting**.
4. Use the ◀ left and right ▶ arrow keys or press the **On/Off** soft key to change the setting.
5. When completed, press the **Done** soft key.
6. Press the **Exit** soft key to exit the menus.

8.3 Audible Alerting

The phone's audible ringer can be switched off. This only affects the ring and does not affect the [visual alerting](#) ⁶⁵.

1. Press the **A MENU** button.
2. Use the ▲ up and down ▼ arrow keys to locate the option **Call Settings...**
3. Press the **Select** soft key.
4. Use the ▲ up and down ▼ arrow keys to locate the option **Audible Alerting**.
5. Use the ◀ left and right ▶ arrow keys or press the **On/Off** soft key to change the setting.
6. When completed, press the **Done** soft key.
7. Press the **Exit** soft key to exit the menus.

8.4 Ringer Sound

You can adjust the sound of the ring used by the phone.

1. Press the **A MENU** button.
2. Use the ▲ up and down ▼ arrow keys to locate **Screen/Sounds** or **Screen & Sound Options**. Press the **Select** soft key.
3. Use the ▲ up and down ▼ arrow keys to locate the option **Personalized Ringing**. Press the **Select** soft key.
 - Use the ▲ up and down ▼ arrow keys to scroll through the different available ring patterns.
 - Press the **Play** soft key to repeat the currently display ring pattern.
 - To make the currently displayed ring pattern the selected ring pattern for the phone press the **Save** soft key.
 - To leave the menu without making any changes press the **Cancel** soft key.
4. When completed, press the **Done** soft key.
5. Press the **Exit** soft key to exit the menus.

8.5 Ringer Volume

When the phone is not on any calls, you can adjust the volume used for the ringer.

1. With the phone idle, use the ▲ up arrow and ▼ down arrow keys to change the volume.

8.6 Display Brightness

1. Press the **A MENU** button.
2. Use the ▲ up and down ▼ arrow keys to locate **Screen/Sounds** or **Screen & Sound Options**. Press the **Select** soft key.
3. Use the ▲ up and down ▼ arrow keys to locate **Brightness**. Press the **Select** soft key.
4. Use the ◀ left and right ▶ arrow keys to adjust the brightness as required.
5. When completed, press the **Done** soft key.
6. Press the **Exit** soft key to exit the menus.

8.7 Display Contrast

1. Press the **A MENU** button.
2. Use the ▲ up and down ▼ arrow keys to locate **Screen/Sounds** or **Screen & Sound Options**. Press the **Select** soft key.
3. Use the ▲ up and down ▼ arrow keys to locate the option **Contrast**. Press the **Select** soft key.
4. Use the ◀ left and right ▶ arrow keys to adjust the brightness as required.
5. When completed, press the **Done** soft key.
6. Press the **Exit** soft key to exit the menus.

8.8 Display Language

The system administrator can configure which language your extension uses. Though the phone's menu you can change that setting.

IP Office Essential Edition - IP Office Essential Edition - Quick Version supports a number of languages. The phone menu may display other languages also supported by the phone. If one of these other languages is selected, the languages displayed on the phone menu may be a mix of that language and English.

1. Press the **A MENU** button.
2. Use the ▲ up and down ▼ arrow keys to locate the option **Advanced**. Press the **Select** soft key.
3. Use the ▲ up and down ▼ arrow keys to locate the option **Language**. Press the **Select** soft key.
4. Use the ▲ up and down ▼ arrow keys scroll through the different languages available.
5. To select the language currently displayed, press the **Select** soft key or **OK**.
6. When completed, press the **Done** soft key.
7. Press the **Exit** soft key to exit the menus.

8.9 Error Tones

1. Press the **A MENU** button.
2. Use the **▲** up and down **▼** arrow keys to locate **Screen/Sounds** or **Screen & Sound Options**. Press the **Select** soft key.
3. Use the **▲** up and down **▼** arrow keys to locate the option **Error Tone**.
4. Use the **◀** left and right **▶** arrow keys or press the **On/Off** soft key to change the setting.
5. When completed, press the **Done** soft key.
6. Press the **Exit** soft key to exit the menus.

8.10 Button Clicks

While using the phone menus, the phone can provide a key press confirmation click sound. This can be turned off if it is annoying.

1. Press the **A MENU** button.
2. Use the **▲** up and down **▼** arrow keys to locate **Screen/Sounds** or **Screen & Sound Options**. Press the **Select** soft key.
3. Use the **▲** up and down **▼** arrow keys to locate the option **Button Clicks**.
4. Use the **◀** left and right **▶** arrow keys or press the **On/Off** soft key to change the setting.
5. When completed, press the **Done** soft key.
6. Press the **Exit** soft key to exit the menus.

8.11 Default Handsfree Audio Path

 
By default, when you make a call or answer a call without lifting the handset, the audio is played through the phone's speaker while you speak via the phone's microphone.

If you have a headset attached, you can change the phone's behavior so the audio is played through the headset by default rather than the speaker.

1. Press the **A MENU** button.
2. Use the **▲** up and down **▼** arrow keys to locate the option **Call Settings....** Press the **Select** soft key.
3. Use the **▲** up and down **▼** arrow keys to locate the option **Audio Path**.
4. Use the **◀** left and right **▶** arrow keys or press the **Change** soft key to change the setting.
5. When completed, press the **Done** soft key.
6. Press the **Exit** soft key to exit the menus.

8.12 The Admin Menu

The **Admin** option is used to access a series of menus. The range of menu options will vary depending on which phone is being used.

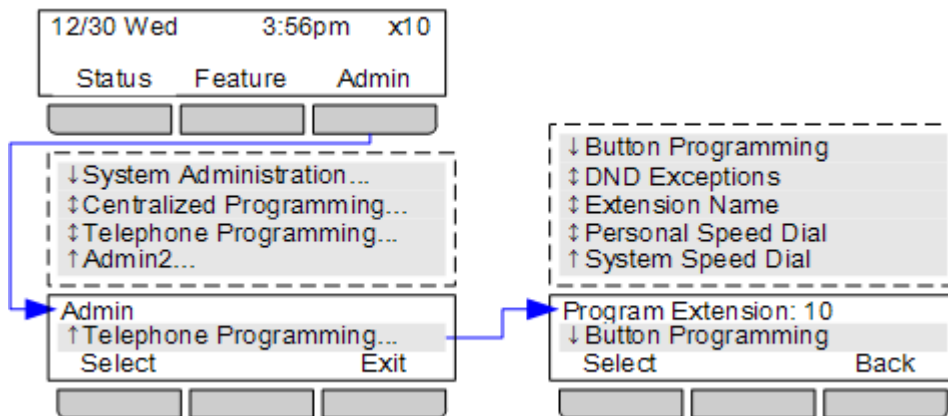

1. Press **Admin**.

2. If just **Telephone Programming** is displayed, press **Select**.

 
- For the first two extensions on the system, a range of options are displayed. The use of those options is covered by the IP Office Essential Edition - Quick Version Phone Based Administration manual. Use the ▲ up and down ▼ arrow buttons to highlight **Telephone Programming** and press **Select**.

3. Use the ▲ up and down ▼ arrow buttons to scroll through the menu options.

- **Button Programming** ⁶⁰ This menu allows you to assign functions to the programmable buttons on your phone. You cannot override any **Intercom**, **Call Appearance** or **Line Appearance** buttons assigned by the system and your system maintainer.
- **DND Exceptions** ³⁸ Set numbers with can still call you even when you have do not disturb on.
- **Extension Name** ⁶⁴ Set your extension name. This is shown on your phone and on others when they call you or are called by you.
- **Personal Speed Dial** ²² Create and edit your personal speed dials.
- **System Speed Dial** ²¹ This option is only shown on the first two extensions in the system. It allows those extension users to create and edit system speed dials for use by all users.

8.13 The A MENU

The **A MENU** key is used to access a range of phone settings. These are mainly settings held by the phone, not the phone system.

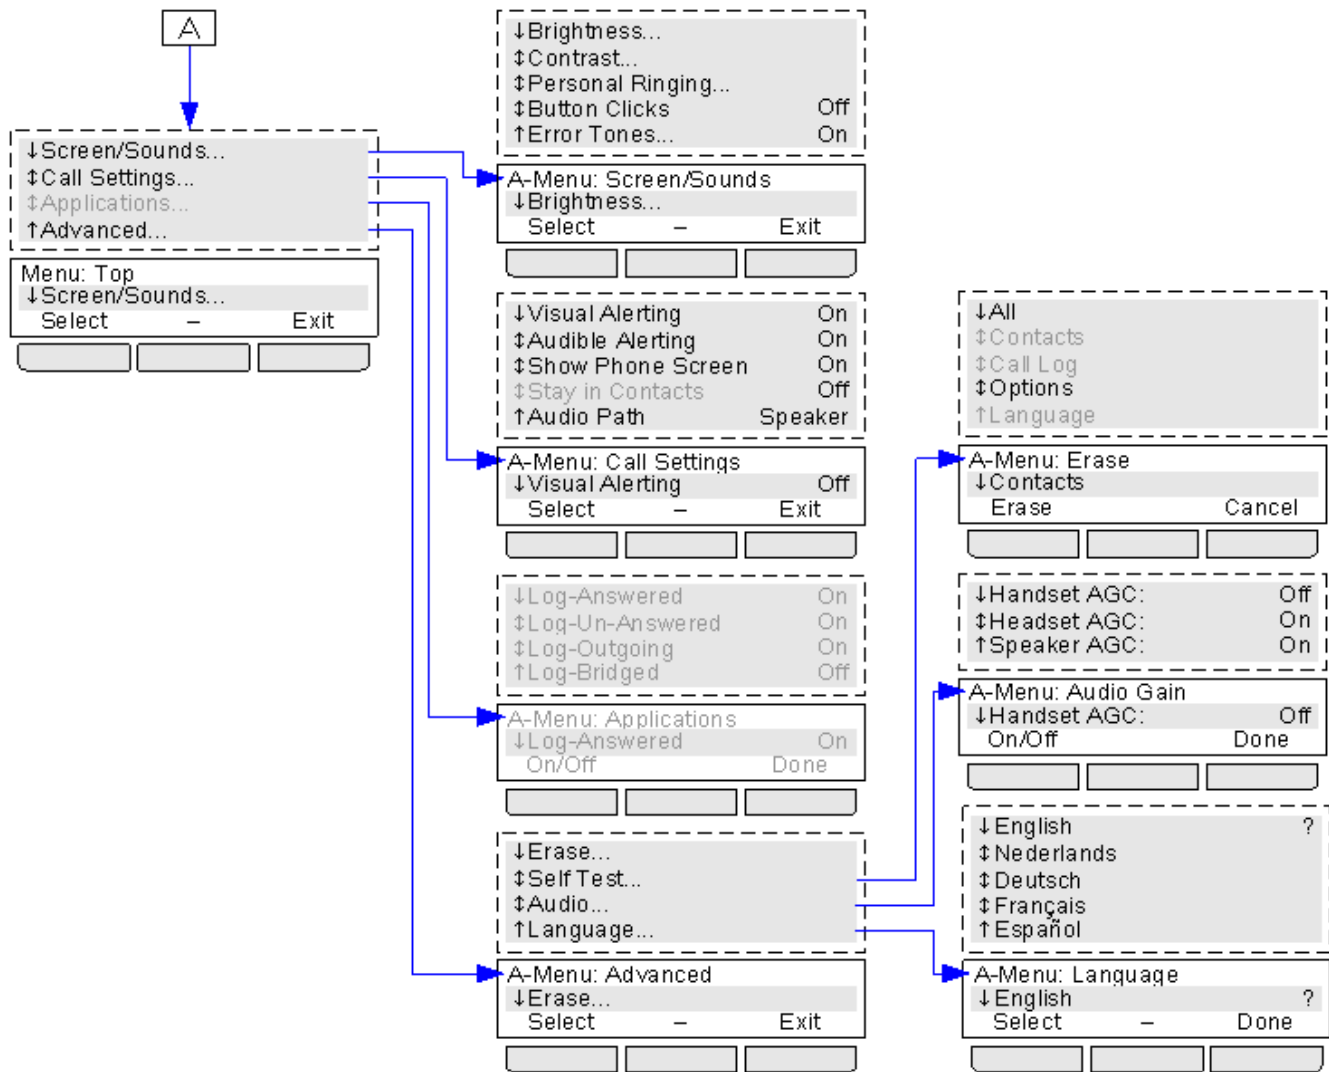

8.14 A-Menu Auto Exit

The **Show Phone Screen** option only applies to the A-menu screens accessed when you press the **A** key. If the option is on, if you receive a call while in the A-menu, the phone will automatically exit the menus and display the call details.

1. Press the **A MENU** button.
2. Use the ▲ up and down ▼ arrow keys to locate the option **Call Settings...** Press the **Select** soft key.
3. Use the ▲ up and down ▼ arrow keys to locate the option **Show Phone Screen**.
4. Use the ◀ left and right ▶ arrow keys or press the **On/Off** soft key to change the setting.
5. When completed, press the **Done** soft key.
6. Press the **Exit** soft key to exit the menus.

Index

A

Absent Text Message 32
 Account Code 37
 Add
 Contact 54, 58
 Alert Notification 61
 All
 Call Log 54, 56, 57, 58
 Contacts 52, 53
 Answer a Call 19
 Answered 54, 56, 57, 58
 At home 32
 At lunch until 32
 Audible Alerting 65
 Audio Path 67
 Auto Dial 23
 Away from desk 32

B

Back soon 32
 Back tomorrow 32
 Be right back 32
 Bridge 29
 Button
 Message Alert Notification 61

C

Call
 Bridge 29
 Coverage 34
 Forward 33
 from Call Log 56
 from Contacts 53
 Ignore 19
 Join 29
 Park 25
 Pickup 19
 To VM 19
 CALL LOG 54, 56, 57, 58
 Call from 56
 Details 57
 Menu 56
 Call Settings
 Audible alerting on/off 65
 Audio Path 67
 Visual alerting on/off 65
 Call Transfer - Supervised 26
 Call Transfer - Unsupervised 26
 Callback 16
 Caller
 Details 57
 Caller volume 24
 Cell Phone Connect 33
 Changing
 Mailbox Access Code 44
 Your Greeting Message 45
 Code
 Account 37
 Lock 36
 Conference
 Hold 27
 Start 27
 Contact
 Add 54, 58
 Edit 53, 54

CONTACTS 52, 53, 54
 Make call 53
 Count 57
 Coverage
 Call 34
 Voicemail 46

D

Default Mailbox Access 41
 Delete Message 42
 Details
 Call Log 57
 Directory
 Add 54, 58
 Edit 53, 54
 Make call 53
 Do Not Disturb 32, 38
 Don't disturb until 32

E

Edit
 Contact 53, 54
 email alert 48
 email notification 48
 Extension
 Name 64
 External 52, 53

F

Fast Forward message 42
 Forward 33
 Forwarding 47

G

Greeting Message 45
 Group
 Call log 56
 Missed 56
 Groups 52, 53

H

Handset volume 24
 Handsfree 28
 Hear Help Prompts 41, 45
 Hold
 Conference 27
 Hold a Call 25
 Hunt group
 Call log 56
 Missed 56

I

Ignore 19

J

Joining a Call 29

L

Lamp 65
 Lock 36

M

Mailbox Access 41
 Mailbox Access Code 44
 Make call
 from Call Log 56
 from Contacts 53
 Meeting until 32
 Menu
 Call log 56
 Contacts 52
 Message Alert Notification 61

Message waiting lamp 65
Messages 41
Missed 54, 56, 57, 58
Missed calls
 Hunt group calls 56
Mobile Twinning 33
More 56

Y
Your Mailbox 41

N

Name 64
New
 Contact 54, 58
Notification 61

O

On holiday until 32
On vacation 32
Out to lunch 32
Outgoing 54, 56, 57, 58

P

Parking Calls 25
Personal Speed Dial 22
Personal 52, 53
Phone Manager 41
Please call 32

R

Reason 57
Reply 47
Rewind Message 42
Ring Again 16
Ring Back 16
Ring Time 57
Ringer
 Audible alerting on/off 65
Ringer volume 24

S

Save Message 42
Skip Message 42
Speaker volume 24
Speakerphone 28
Speed Dial
 Personal 22
 System 21
Supervised Call Transfer 26
System Speed Dial 21

T

To VM 19
Transfer
 To Voicemail 26
Transfer a Call 26

U

Unlock 36
Unsupervised Call Transfer 26
Users 52, 53

V

Visual Alerting 65
Voicemail 41
 Coverage 46
 Transfer 26
Volume 24

W

Wake Up Service 61
With Cust. until 32
With visitors until. 32

Performance figures and data quoted in this document are typical, and must be specifically confirmed in writing by Avaya before they become applicable to any particular order or contract. The company reserves the right to make alterations or amendments to the detailed specifications at its discretion. The publication of information in this document does not imply freedom from patent or other protective rights of Avaya or others.

All trademarks identified by the ® or ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.

This document contains proprietary information of Avaya and is not to be disclosed or used except in accordance with applicable agreements.

© 2011 Avaya Inc. All rights reserved.