


Fitting MagClic Couplings to Dapol (Lionheart) BR Mk1 Coach

1. Invert coach, preferably in a cradle or at least onto foam padding.
2. Remove screw and spring that attach the bogie to the coach. Gently lift and slide bogie back towards the coach centre being aware of wiring for lights and other delicate detail

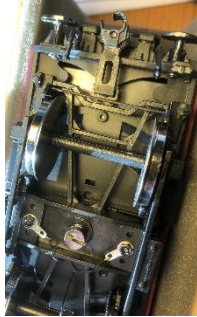

3. Grasp dummy hook installed between buffers with pliers and pull out of buffer beam slot.



4. Hold sprung Buckeye couplings firmly and twist to release twin legs out from the oblong holder.



5. Enlarge slot in buffer beam slightly with a small square swiss file.




6. Insert MagClic coupling through slot and fix using the supplied spring and split pin as normal. Ensure free movement.



7. Re -affix bogie using screw and spring removed earlier.

Repeat at second coach end, remembering to use opposite pole MagClic coupling.

Jobs a good 'un.

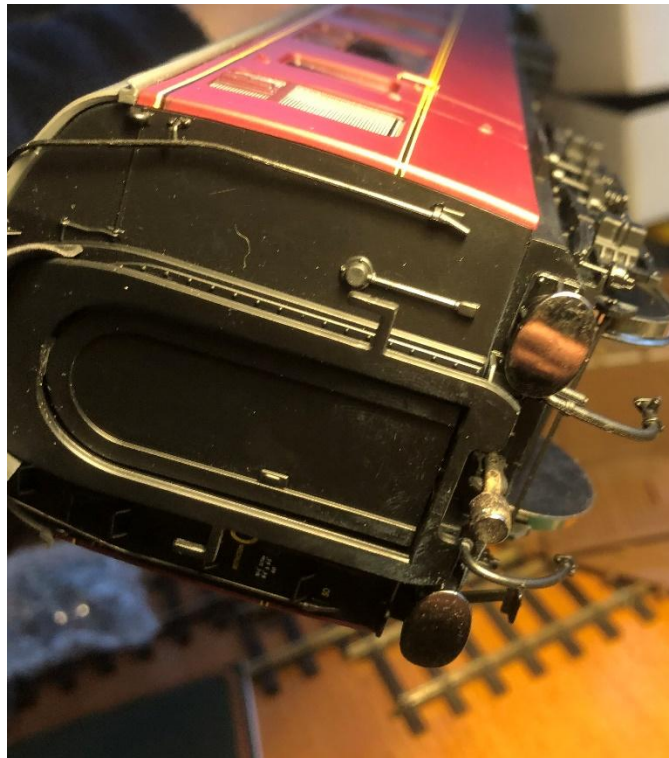

Note: Brake Coaches are supplied with a screw coupling at Brake end which can be changed as per normal if desired.

Graham Beckwith

29/11/2022